



2400W Generator



For service, spare parts or product information,
please contact Smart Marketing Group Pty. Ltd.

AUST. 1300 660 457 N.Z. 0800 474 876

SUGGESTED APPLICATIONS

These are some suggestions of appliances which could be powered by this generator. These suggestions can not be run at the same time, please read page 11 for full details:

- Portable televisions up to 200W
- Camping fridges up to 400W
- Lighting up to 2100W
- Power tools up to 1200W

Never exceed 1800W in total when using multiple devices.

TECHNICAL INFORMATION

| Specifications | |
|--------------------------|-------------------------------|
| Generator | BRG2400 |
| Output Voltage | 240V AC ~ 50Hz |
| Continuous Power (Rated) | 2400W |
| Maximum Output | 2.4Kva at power factor of 1 |
| Peak Power (Surge) | 2800W |
| Motor | Single cylinder 4-stroke |
| Spark Arrestor | Yes |
| Tank Capacity | 12L |
| Noise Level | 76db at 7m |
| Weight | 45Kg |
| Approximate Run Time | 5 Hours at 1500W |
| Fuel | Unleaded Petrol |
| Oil | SAE 30W or SAE 15W-40 |
| Oil Quantity | 600ml |
| Spark Plug | Torch F7RTJC or NGK BPR4ES |

CONTENTS

| Section | Page |
|------------------------------|---------|
| Contents | 2 |
| Suggested Applications | 2 |
| Technical Information | 2 |
| Introduction | 3 |
| Guarantee | 3 – 4 |
| General Safety Instructions | 5 – 7 |
| Specific Safety Instructions | 8 |
| Electrical Information | 9 |
| Components and Controls | 10 |
| Operating Instructions | 11 – 16 |
| Maintenance | 16 – 17 |
| Trouble Shooting | 18 |
| Parts Diagram | 19 |
| Contact Information | 20 |

INTRODUCTION

Dear Customer,

Thank you for purchasing this generator which has passed through our extensive quality assurance processes. Every care has been taken to ensure that it reaches you in perfect condition. However, in the unlikely event that you should experience a problem, or if you require any assistance please do not hesitate to contact us;



If you have a problem, call customer service do not return this generator to the place of purchase.

CUSTOMER SERVICE

Australia: 1300 660 457

New Zealand: 0800 474 876

**Operating times: Monday – Friday
8.30am - 5.30 pm**

Australian Eastern Standard Time (AEST)

EXPRESS WARRANTY STATEMENT GENERATOR GROUP

You are not required to do anything to register your generator purchase. Please attach the purchase receipt to this manual and ensure both are kept safe. We hope you enjoy your new generator, and if you have any problems call customer service on the above phone numbers. Do not return to place of purchase.

Smart Marketing Group Pty Ltd (SMG) warrants that this generator will be free from manufacturing faults or defects for 12 months from the date of purchase, providing original purchase receipt is kept and shown when needed and is subject to the terms and conditions below.

If a warranty fault appears within the warranty period, SMG reserves the right to replace or repair the product. In the event that SMG chooses to replace the product, this original warranty will expire at the original date. If the product includes various accessories or components, only the defective accessory or component will be replaced or repaired.

SMG reserves the right to replace defective parts of the product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished products of the same type rather than being repaired. Refurbished parts may be used to repair the products.

What is covered

- Manufacturing fault or defect.

How to claim under this warranty.

- Call customer service, phone number at the top.
- Ensure you have the following: Original purchase receipt, Model of generator, Serial number of generator.
- Discuss the issue.
- Customer service will advise which authorised service agent to take the generator to provided the issue is a warranty one.
- Take generator to authorised service agent for repair.

What is not covered

- Commercial use of generator.
- Use of generator in a commercial premises.
- Damage caused by incorrectly mixed 2 stroke fuel.
- Damage or deterioration due to transport.
- Damage caused by negligence, misuse, abuse or accident or incorrect voltage and wattage.
- Any corrosion or rusting.
- Damage caused by incorrect set up and start up.
- Replacement parts due to general wear and tear.
- Generators with serial number defacement, modification or removal.
- Generators which have been serviced by other than an authorised SMG service agent.
- Generators with no original purchase receipt.
- Generators which have been on sold, not original purchaser.
- Damage due non-servicing of generator as is required by this manual.
- Blockages / damage caused by dust, dirt, spiders webs or insects.
- Damage caused by the incorrect fitting of accessories.
- Damage caused by overloading, overworking the generator.
- Damage to attached equipment or third party accessories.
- Damage caused by attached equipment or third party accessories.

CONTACT DETAILS

Smart Marketing Group Pty Ltd
33-35 Lionel Road, Mt. Waverley
Victoria 3149, Australia.
Tel (+613) 9543 7266
Fax (+613) 9543 9839
sales@smga.com.au

COMPLETE WARRANTY STATEMENT – GENERATOR GROUP

As soon as you have purchased the generator, we recommend that you check to make sure it is intact and that you read the operating instructions carefully before using it. The purchase receipt for this product is to be retained and must be presented if making a claim under the terms of the Smart Marketing Group (SMG) warranty. Bank account statements are not acceptable for proof of purchase.

This warranty does not cover generators intended for hire or use in commercial applications or in commercial premises. The warranty will under no circumstances extend to reimbursement or payment of damages, whether direct, indirect or consequential. The warranty is void if there is evidence the generators has been modified or tampered with in any way or used with unauthorised accessories without our consent.

SMG declines any responsibility or liability whatsoever arising from misuse or abuse, negligent handling of the generators or if the product has not been installed or failure to comply with the relevant safety, operating, setting and maintenance instructions (see further in this manual).

The warranty does not extend to installation or disconnection costs.

Any item sent freight forward/collect for repair will be refused. Warranty repairs are free of charge, provided the appliance is delivered to our service department or authorised service agent. The generator will need to be returned, adequately protected in a box. SMG will not be responsible for any in-transit loss or damage. Assistance under the warranty will only be made available if the request is made to our customer service team on the contact numbers listed below and proof of purchase is provided.

This is a repair only warranty you will need to take the generator to the authorised service agent after contacting our customer service centre.

If the product includes various accessories or components, only the defective accessory or component will be replaced or repaired.

SMG reserves the right to replace defective parts of the product with parts and components of similar quality, grade and composition where an identical part or component is not available.

Products presented for repair may be replaced by refurbished products of the same type rather than being repaired. Refurbished parts may be used to repair the products.

Damage caused by third party accessories is not covered under this warranty.

Damage caused to attached equipment or third party accessories will not be covered under this warranty.

Rust and corrosion are not covered under this warranty.

If a warranty fault is found the freight cost will be credited to the owner. If no fault is found the product will be returned and any costs associated with the service will be charged to the owner.

Blockages caused by spider webs, insects, dirt, or accumulated dust and incorrectly mixed 2-stroke fuel are not covered by warranty. SMG reserves the right to replace or repair the appliance within the warranty period. Parts found to be defective due to a manufacturing default will be replaced free of charge.

In the event of SMG choosing to replace the appliance, the warranty will expire at the original date of purchase. If no warranty fault is found the owner will be advised and the product will be returned and any costs associated with the service will be charged to the owner.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded.

In New Zealand, this SMG warranty is in addition to the conditions and guarantees which are mandatory as implied by the New Zealand Consumer Guarantee Act 1993. For service, spare parts or product information please contact customer service:

Australia: 1300 660 457

New Zealand: 0800 474 876

CONTACT DETAILS

Smart Marketing Group Pty Ltd
33-35 Lionel Road, Mt. Waverley

Victoria 3149, Australia.

Tel (+613) 9543 7266

Fax (+613) 9543 9839

sales@smga.com.au

SAFETY

Before attempting to operate this generator the following basic safety precautions should be taken to reduce the risk of fire, electric shock and personal injury. It is important to read the instruction manual and to understand applications, limitations and potential hazards associated with this generator. It is important that you read, understand and follow these instructions very carefully. They are designed for the safety of yourself and others ensuring a long and trouble free service life from your generator. This generator is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

OPERATING ENVIRONMENT

ALWAYS use your generator in an open well ventilated area. Do not expose your generator to rain or use in damp or wet locations. Do not expose your generator to direct sunlight. Keep the work area well lit. Do not use your generator in areas where there is a risk of explosion or fire from combustible materials, flammable liquids, paint, varnish, petrol, etc flammable gases and dust of an explosive nature. As a precaution it is recommended that you consult an expert on selecting and using a suitable fire extinguisher and have it available for use in an emergency when operating the generator.

GUARD AGAINST ELECTRIC SHOCK

Never touch the generator with wet or damp hands as electric shock may occur. Always ensure your generator is connected to ground, i.e. earthed with the supplied earth stake, see page 12.

BEWARE OF CHILDREN & PETS

Children and pets should be kept out of the operating area. Children should not be allowed to touch or operate generators or touch extension cords. All generators should be kept out of reach of children. When NOT in use keep the generator preferably stored or locked in a secure well ventilated cabinet or room with the fuel tank empty.

SELECT A GENERATOR WITH A SUFFICIENT RATING

Select the right generator for the job. Do not use a generator to do a job for which it was not designed. Do not force a small generator to do the job of a heavy duty generator. Any damage caused by overloading will void the warranty. Do not use generators for purposes not intended.

PROTECT POWER LEADS FROM DAMAGE

Always disconnect power cords from a power supply socket by pulling the plug. Never pull on the cord. Keep the power lead away from heat, oil, solvents and sharp edges. If a power lead becomes damaged have it replaced by an authorised service facility.

FUEL

Fuel used in this generator is poisonous. Always wear approved breathing protection when decanting fuel. If you get any fuel on your skin or clothes wash the affected area immediately with soap and water and change your clothes. If you get fuel in your eyes wash immediately with clean water and seek medical attention. If any fuel is swallowed DO NOT induce vomiting, seek immediate medical attention.

HOT COMPONENTS

Beware many of the components will get hot during use. Never touch any of the metal pipes, pump or motor as these may burn.

MAINTAIN YOUR GENERATOR WITH CARE

When not using your generator ensure the fuel cock is 'OFF'. Never leave the fuel cock 'ON' as this can damage the carburettor. Follow the instructions for lubricating and changing accessories. Keep handles clean, dry and free from oil and grease. Ensure that ventilation slots are kept clean and free from dust at all times. Blocked ventilation slots can cause overheating and damage to the motor. Ensure that the air and fuel filters are kept clean at all times.

REMOVE ADJUSTING KEYS AND WRENCHES

Form the habit of always checking to see that any adjusting keys or wrenches have been removed from the generator before operating.

FIRE PRECAUTIONS

Always contact your fire authority before using the generator on fire restricted days. It is not recommended to use your generator when a total fire ban is in force. Never refuel your generator while it is still running. Never connect your generator to a commercial or domestic power outlet. As a precaution it is recommended that an expert is consulted on obtaining and using a suitable fire extinguisher.

CLEANING YOUR GENERATOR

Always stop your generator before you commence cleaning. Always ensure that your generator has cooled, about one (1) hour, before cleaning and storing. When cleaning your generator use only a damp soft cloth. NEVER use liquid or solvents of any type.

EXTENSION CORDS & REELS

Inspect extension cords periodically and replace if damaged. Never use damaged extension cord as these may cause injury. Always unwind any extension cords fully before plugging into mains power supply. Protect your extension cord or reel from sharp objects, excessive heat, damp conditions or wet locations. Always use a '3' core extension cords intended for and marked 'outdoor' use, which are no longer than 10m.

GENERATOR 'EARTHING'

Always ensure that this generator is "Earthed" correctly before using. "Earthing" stake and wire has been supplied with this generator ensure it is used to ensure your safety, see page 12.

CHECK DAMAGED PARTS

Before using the generator it should be carefully checked to determine that it will operate properly and perform its intended function.

Check for broken or missing parts and have them replaced or repaired at an authorised service facility. Check any other condition that may affect the operation of the generator. A guard or any other part of the generator that is damaged should be properly repaired or replaced by an authorised service facility unless otherwise indicated in this instruction manual.

Any switch that does not operate correctly must be replaced by an authorised service facility.

DO NOT use the generator if the 'ON / OFF' motor switch does not turn the generator 'ON' and 'OFF'.

PERSONAL SAFETY

Clothing

Do not wear loose clothing, jewellery or anything that could get caught in moving machinery.

Hair

Long hair should be tied back or contained in a protective covering.

Eye Protection

The use of safety goggles is highly recommended (normal glasses are not sufficient for eye protection) when using or refuelling generators. Prescription glasses do not have safety lenses.

Footwear

Where there is the risk of heavy objects or if there is a risk of slipping on wet or slippery floors, suitable non-slip safety footwear should be worn. Protect your feet from dropping accidents.

Ear Protection

The use of ear protection is highly recommended when using generators. The continual noise may damage your ears.

Respiratory Protection

Always wear approved breathing protection when decanting fuel. ALWAYS use this generator in well ventilated area. Never use indoors.

WARNING: Do not breathe in exhaust fumes. Exhaust fumes are poisonous and may cause drowsiness, unconsciousness and even death.

Do Not Over Reach

Do not over reach. Keep a proper footing and maintain your balance at all times. Avoid using abnormal stances and awkward body positions.

Stay Alert

Watch what you are doing, use common sense, and never operate a generator when you are tired, drinking alcohol, taking drugs or if taking medication that causes drowsiness.



WARNING

Do not attempt to modify the generator in any way; this will VOID your warranty.

The use of any attachment or accessory other than those recommended in this instruction manual could result in damage to the generator and could cause injuries to the operator.

This petrol generator complies with Australian / New Zealand and International standards and safety requirements. Repairs should only be carried out by qualified persons using original spare parts. Failure to do so may result in considerable danger to the operator.

SPECIFIC SAFETY INSTRUCTIONS

Warning! Do not use the generator in areas where there is a risk of explosion or fire from combustible materials. The sparks possibly caused when using this generator may ignite combustible materials as well as flammable liquids, paint, varnish, petrol, flammable gases and dust of an explosive nature. As a precaution it is recommended that you consult an expert on a suitable fire extinguisher and its use. Ensure that the work area is kept clear of combustible materials.

Warning! Do not use the generator indoors or in confined spaces where exhaust gases, smoke or fumes could reach dangerous concentrations.

- Never connect this generator to a second generator.
- Never connect this generator to Commercial or Domestic power supply.
- Always use the generator in an open well ventilated area.
- Unit will become hot during use. Please keep generator at least one metre (1m) away from buildings, other equipment, pedestrian areas or flammable materials.
- Never pull the re-coil starter once the generator engine has started. Any damage caused will not be covered by warranty.
- Never start or stop the generator with any appliances attached.
- Ensure the generator has stopped before servicing, or lubricating etc.
- Do not attempt to modify the generator, guards or the supplied accessories in any way.
- Do not touch the exhaust. This can become very hot during operation and can cause serious burns.
- Always check the generator for damaged parts or fuel leaks, ensure these are fixed before using it.
- Never refuel while smoking or in the vicinity of an open flame.
- Always wear safety eye wear, ear and breathing protection when operating or refuelling the generator.
- To avoid a fire if you spill fuel while refuelling, clean up before starting the generator.
- Never operate or store the generator on its side, ALWAYS operate or store in an upright manner on firm, solid ground.
- Your generator is factory set, NEVER attempt to speed it up as this could endanger the user and damage the generator and/or attached appliances.
- Never operate the generator in damp, wet or flooded conditions.
- Before plugging appliances into the generator allow it to run up to full speed.
- If the generator makes an unfamiliar sound or vibrates excessively, switch the generator 'OFF' immediately. Investigate the possible cause or consult your authorised service agent.
- Do not use ANY type of coolant on the generator as a fatal electric shock could occur.
- Never use coolant in the generator as damage may occur.
- Do not touch the generator with wet hands as this may cause electrocution.
- Never use your generator on highly conductive surfaces e.g. steel walk ways, metal roof or metal bench, as this could cause an electric shock.
- Always operate your generator at least two (2) metres away from conductive surfaces.
- Locate this generator in a convenient place, avoid using long extension leads.
- If an extension lead is used, avoid leaving it where it may be damaged by pedestrian or vehicular traffic or cause a trip and fall hazard.
- Always observe normal safety precautions with ALL appliances used with this generator.
- Never transport the generator with fuel in the tank. ALWAYS empty the fuel tank.
- All loads must be kept within the ratings stated on the name plate. Overloading the generator will damage the unit or shorten its life. This will not be covered under warranty.
- Do not tamper or alter any parts as this may cause personal injury or damage the generator.
- Always disconnect any loads before starting or stopping the generator.
- When storing the generator always store in a secure well ventilated area.
- Requires a minimum load of 400W to operate correctly.

IMPORTANT



ELECTRICAL DATA

This generator is fitted with a sealed electrical connection socket that is compatible with the generator. If the electrical connection socket becomes damaged it must be replaced with a complete assembly that is identical to the original, and this must be replaced by an authorised service agent. Never connect to an external power supply. If in doubt always consult a qualified electrician.



FUEL - ONLY USE UNLEADED PETROL (ULP)

Fuel tank capacity – 12 litres (12 L)

Use of incorrect fuel and/or oil may damage the generator and will not be covered under warranty.

Do not use E10 or any type of ethanol fuel as this will damage the generator and will not be covered under warranty.

Do not use high octane fuels (greater than 91%) as this will damage the generator and will not be covered under warranty.

- Ensure you use clean fresh unleaded petrol (ULP).
- Use a clean approved container to store your unleaded petrol (ULP) in before decanting into the fuel tank.
- If contaminated (dirty) or old (stale) fuel is used any damage caused will not be covered under warranty.



OIL

To operate, this generator requires oil in the sump, not supplied. If the generator does not have the correct level of oil in the sump, it will not run, see note below.

Oil capacity – approximately six hundred millilitres (0.6 L or 600 ml)

Oil type – SAE 30W or SAE 15W-40


- Always check oil level before using.
- Always use fresh clean oil.
- Change oil every 50 hours or every 3 months.
- If contaminated (dirty) or old (stale) oil is used any damage caused will not be covered under warranty.

NOTE: This generator is fitted with an oil cut out switch and red warning light. If the oil level is empty or low then the generator WILL NOT start or run and the low oil light will glow when the recoil is pulled.

Always check the oil level before starting the generator.

Never check or add oil while the generator is running.

PIC. 1

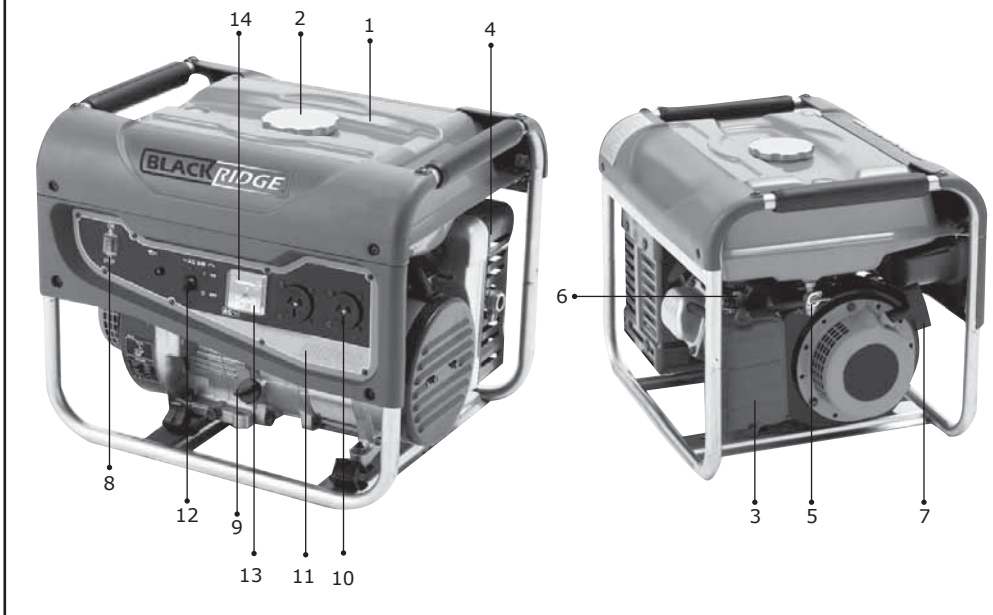

COMPONENTS AND CONTROLS

Pic. 1

1. Fuel tank
2. Fuel cap
3. Air filter cover
4. Muffler
5. Fuel tap
6. Choke lever
7. Recoil start handle
8. Engine ON/OFF switch
9. Dual oil sump plug and oil fill
10. Dual 240V AC power outlet sockets
11. "Earth" connection nut
12. AC output circuit breaker
13. Hour meter
14. Output voltmeter
15. "Earth" stake and wire, not shown
16. Oil fill bottle, not shown

OPERATING INSTRUCTIONS

Unpacking

Carefully unpack your generator. This generator is bulky and heavy, two (2) person lift required. Dispose of all packing material in an environmentally responsible manner.

Open carton, gently lift the generator clear of the carton and packaging, this may require 2 people. Remove from plastic bag.

NOTE: Plastic bags can be a danger to young children, dispose of immediately.

Always dispose of packaging in a responsible manner.

Pre - Operation Preparation

Note: If unit has previously been used, the motor, muffler and exhaust may still be hot enough to burn. Always exercise caution when checking the generator.

1. Check that the fuel/engine switch is OFF
2. Check that the spark plug lead is firmly attached to the top of the spark plug.
3. Ensure that NO appliances are connected to the generator.
4. Holding on to the cage gently rock the generator and listen for any noise which may indicate loose items. If anything appears to be loose either tighten or consult a service agent

Filling the Fuel Tank

Always use clean fresh fuel as specified on page 9. Stale fuel can cause the generator to run rough and damage the motor; this will not be covered by warranty.




1. Ensure the engine is off.
2. Ensure the fuel tap and engine switch are both OFF.
3. Use fresh fuel as detailed on page 9.
4. Do not fill fuel tank above the top of the fuel filter. Pic:2
5. Ensure that the fuel tank cap is screwed on tightly.

Adding Lubricating Oil

Always use clean fresh oil as specified on page 8. Incorrect or old oil can cause the generator to run rough and damage the motor; this will not be covered by warranty.

1. Ensure that engine is OFF when filling oil.
2. Remove oil plug, Pic. 1, item 10 or see Pic. 3, on side under fuel tank on same side as the engine switch.
The sump is cross flow so either oil plug is ok to fill from.
3. Use oil as detailed on page 9.
4. Ensure generator is level when filling with oil. **DO NOT TIP.**
5. Only fill oil to the top of the thread, Pic. 4.
6. Ensure that the oil filler cap is screwed on tightly before attempting to start the generator.

Warning: Over filling the oil can damage the generator, this damage will not be covered under warranty.

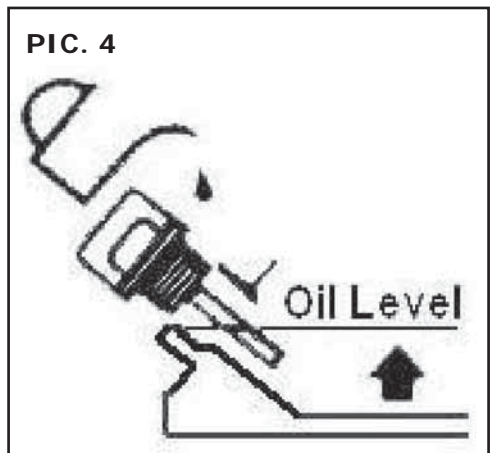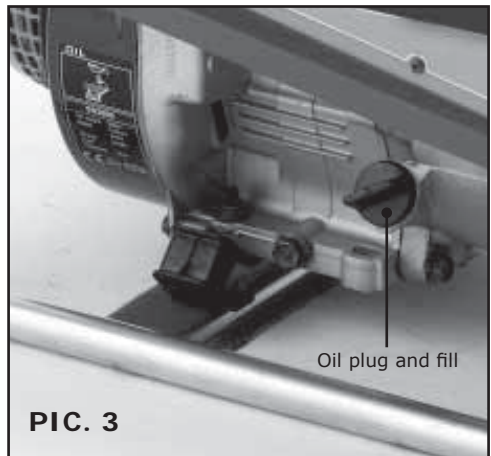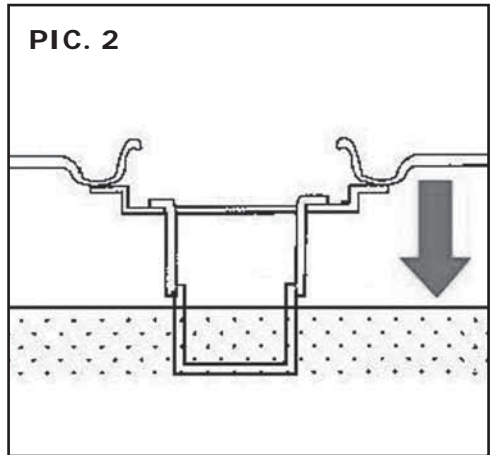

Generator 'Earthing'

Always ensure that this generator is "Earthed" BEFORE starting and using.

1. Ensure that engine is OFF when fitting the "Earth" stake and wire.
2. Attach the wire to the "Earth" point on the generator, see Pic. 5.
3. Push the attached stake into the ground. Ensure that this is not a trip hazard when near the generator.
4. Ensure the generator is OFF and cool before removing the "Earth" stake and wire.





Starting Your Generator

Warning: Never start your generator without "earth" attached.

1. Ensure the "Earth" stake and wire are attached, see Pic. 5.
2. Turn choke to start by sliding the choke lever to the right, see Pic. 6.
3. Turn the fuel to on by turning the fuel tap lever, see Pic. 6.
4. Turn the engine switch on, see Pic. 7.
5. Pull the recoil starter slowly until engaged, then pull briskly. This step may need to be repeated until generator engine starts, this can take up to about 12 pulls.

Warning: Never pull the recoil once the engine has started. Any damage caused will not be covered under warranty.

6. Allow engine to run up to speed, this usually takes up to about 20 seconds.
7. Turn choke to RUN by sliding the choke lever to the left.
8. The generator will now be idling and ready for use.

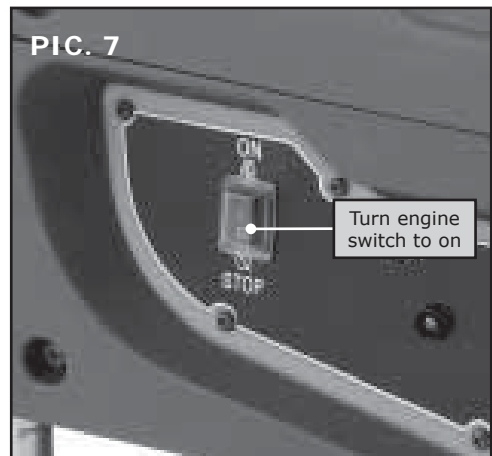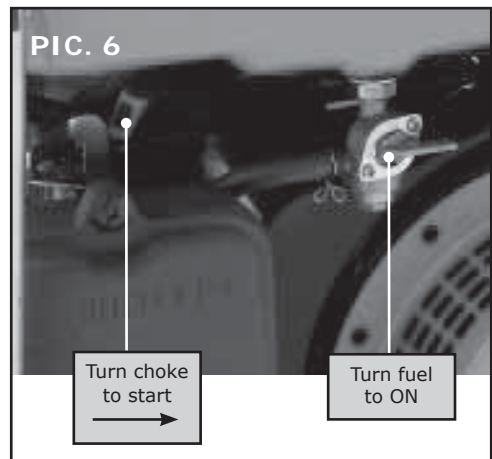

USING YOUR GENERATOR

AC Outlet

Your generator is equipped with dual 240V AC power sockets this will run a range of devices providing they are within the limits of the generator's output.

NOTE: The peak (surge) power requirements of some devices e.g. Fridges, Televisions, etc; can be up to seven (7) times greater than their rated (continuous) power. Do not overload your generator. The device's wattage can be found on the data label, see Pic. 8.

You can use any combination of items provided that you do not exceed the limits of your generator. Never exceed 1800W in total when using multiple devices.

NOTE: When using multiple devices only start one device at a time.

Your Generator AC Limits:

Rated (continuous) power 2400W

Peak (surge) power 2800W


Note: Long extension leads may reduce the effectiveness of your generator's supply power.

To use the 240V AC outlet:

1. Check that AC output circuit breaker is ON. If not ON or can not be turned ON go to page 14 and fix the problem before using the generator.
2. Lift the flap and plug your appliance into the outlet socket on the face plate.
3. Turn the appliance on and use as per the manufacturer's manual.
4. When finished turn your appliance off.
5. Disconnect appliance from the generator and the flap should close automatically.

NEVER leave any appliances plugged into your generator, always disconnect when appliance is not in use.

PIC. 8

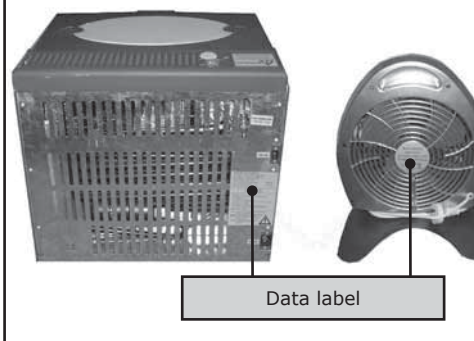

WARNING



IMPORTANT

This generator is not designed for use with sensitive electronic products. This means this generator **CAN NOT** be used with laptops, computers, DVD's Videos or any product with a remote control, key pad or circuit board.

NOTE: The use of a surge protector is highly recommended. Ensure the "Earth" stake and wire are attached. This generator requires a minimum load of 400W to operate correctly.

| Suggested Device | Maximum Suggested Wattage | |
|------------------------------------|---------------------------|----------------------------|
| Bayonet/Screw in globes (home use) | Up to 2100W | Maximum of 42 x 50W globes |
| Florescent tubes | Up to 1800W | Maximum of 90 x 20W globes |
| Halogen lights | Up to 1850W | |
| Power tools | Up to 1200W | |
| AC/DC camping fridge | Up to 400W | |
| Cooling fans (no remote) | Up to 1200W | |
| Heating (no remote) | Up to 1200W | |
| Kettle | Up to 1200W | |
| Toaster | Up to 1200W | |
| Water pump (sump and transfer) | Up to 200W | |

Requires a minimum load of 400W to operate correctly. You can use any combination of items provided that you do not exceed the limits of your generator.
Never exceed 1800W in total when using multiple devices.


Output Power Circuit Breaker AC

The AC output power circuit breaker, Pic. 9, will only turn OFF if the attached device is faulty or if the devices required power is greater than the generators ability. If this circuit breaker does turn OFF;

1. Turn the attached appliance OFF.
2. Disconnect the appliance.
3. Wait for 2 minutes for the circuit breaker to cool down.
4. Re-connect the appliance and turn it ON. If the circuit breaker trips again;

Check the appliances wattage on the data label, as it may require more power than this generator can supply.

Have the appliance checked as it may be faulty.

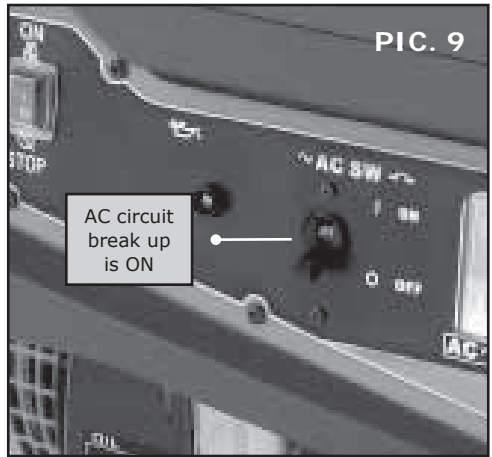

Voltmeter

This shows the approximate voltage being supplied through the dual AC sockets, see Pic. 10.

Hour Meter

This shows the approximate number of hours the generator has operated, see Pic. 10.


Low Oil Protection

If the oil level in the motor sump drops to a dangerously low level then the generator will automatically stop.

If the oil level in the motor sump is dangerously low, then the generator will not start. If your generator will not start always check the oil level first.

If oil is low and the recoil is pulled the low oil light, will flicker. The low oil light will only flicker while the recoil is being pulled.

To check oil level or to fill see page 9 and page 11.

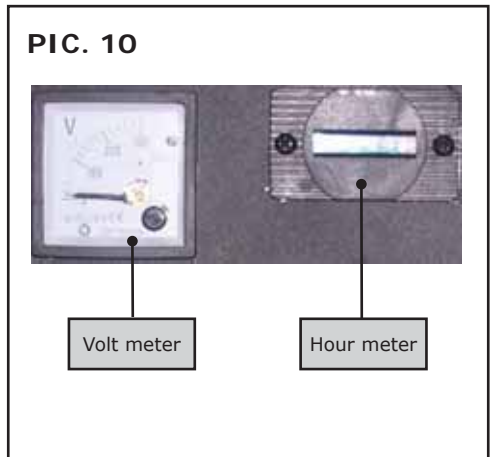

STOPPING YOUR GENERATOR


Important: Before stopping the engine ensure ALL electrical appliances or power leads are unplugged from the generator.

Cooling Down

Allow your generator to idle, CHOKe OFF, NO LOAD and engine speed lever set to low for 1-2 minutes. This will allow all components to cool gradually and prolong the life of the generator.

To Stop

1. Turn off the appliance and disconnect from your generator.
2. Allow to cool down, see above.
3. Turn fuel tap left to OFF.
4. Turn the engine switch to OFF.
5. Remove the "Earth" stake and wire.

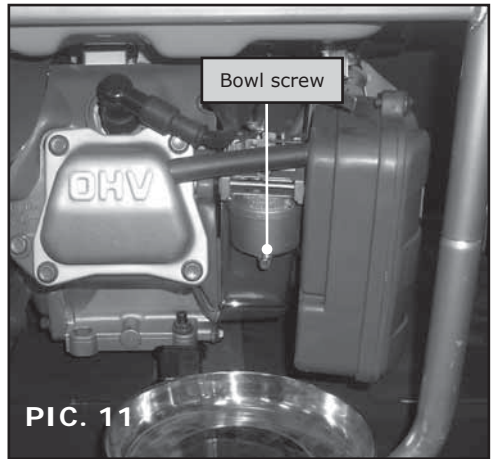

TRANSPORTING/STORING YOUR GENERATOR

Allow the generator to cool before transporting or storing.

The fuel cap will leak fuel if transported with fuel in the fuel tank, this is NOT a fault.

During use there will appear a misting, layer of fuel on the fuel tank this is normal as the fuel cap "vents" while the generator is running. This misting is not a fault.

1. **Warning:** Empty the carburettor bowl and drain fuel tank before transporting or storing.
2. To empty carburettor bowl place a fuel resistant container under the bowl screw, see Pic. 11.
3. Loosen the bowl screw, see Pic. 11.
4. Allow the fuel to drain into the container.
5. Tighten the bowl screw.
6. Appropriately dispose of the fuel.

To drain fuel tank;

7. Place a fuel resistant container under the bowl screw, see Pic. 11.
8. Turn the fuel tap ON.
9. Do steps 3 to 6.


SAFETY DEVICES

AC Outlet

Your generator is equipped with an AC circuit breaker, see page 14. If this is OFF, then the generator will produce NO POWER.

To restart the power supply;

1. Remove the appliance.
2. Stop the generator, see page 14.
3. Wait 2 minutes.
4. Turn the AC circuit breaker ON.
5. Start generator.
6. Appropriately dispose of the fuel.
7. If the AC circuit breaker trips the attached appliance is either faulty or the appliances required power is greater than the generators output.

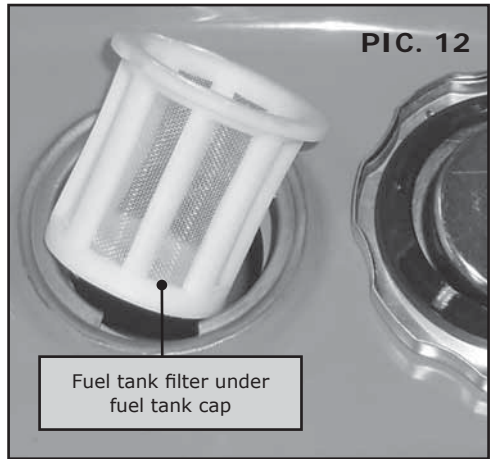

MAINTENANCE INFORMATION

If scheduled maintenance is NOT carried out then this will void your warranty. Use the Service Log on page 20 to keep track of the regular servicing. Ensure that the authorised service agent has dated, signed and stamped this log to ensure your warranty is not void.

Fuel Tank Filter, Pic. 12

The fuel tank filter should be checked every time you fill up the fuel tank. If dirty, replace. Your fuel tank filter should be replaced every 50 hours (operation) or every 3 months, whichever ever occurs first or whenever considered necessary.

To check or replace the fuel tank filter;

1. Remove the fuel tank cap.
2. Remove the fuel tank filter.
3. If dirty replace fuel tank filter before using the generator.
4. Push new fuel tank filter into the top of the fuel tank.
5. Replace the fuel tank cap.


Fuel Line Filter

The fuel line filter should be replaced every 50 hours (operation) or every 3 months, whichever ever occurs first or whenever considered necessary. This must be replaced by an authorised service agent. This servicing must be carried out as noted above or your warranty will be void.

Spark Plug

Spark plug should be checked every 50 hours (operation) or every 3 months and replaced every 100 hours (operation) or every 6 months, whichever ever occurs first or whenever considered necessary.

1. Unplug the spark plug lead off the spark plug.
2. To clean use a wire brush/nail file and remove the carbon deposits on spark plug base
3. Check the spark plug gap using a feeler gauge. The gap should be 0.7mm \approx 0.8mm (0.028" \approx 0.031")
4. The replacement spark plug is Torch F7RTJC or BPR4ES

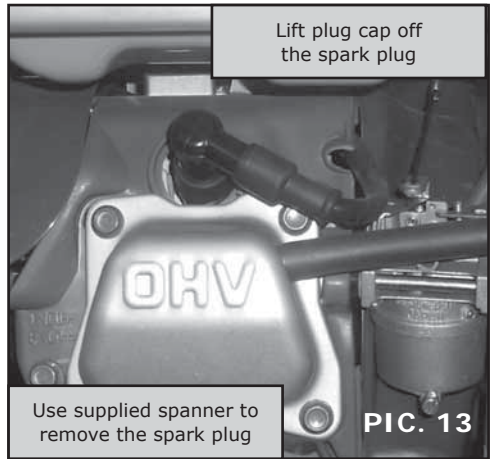


Air Filter

Air filter should be checked daily and replaced every 50 hours (operation) or every 3 months which ever occurs first or whenever considered necessary.

To check or replace the air filter;

1. Unscrew top and bottom screw and remove cover, see Pic 14.
2. Remove filter element.
3. If dirty clean or replace air filter element before using the generator.
4. Push new air filter element before using the generator.
5. Replace the air filter cover and lock the cover in place using both the top and bottom screws.

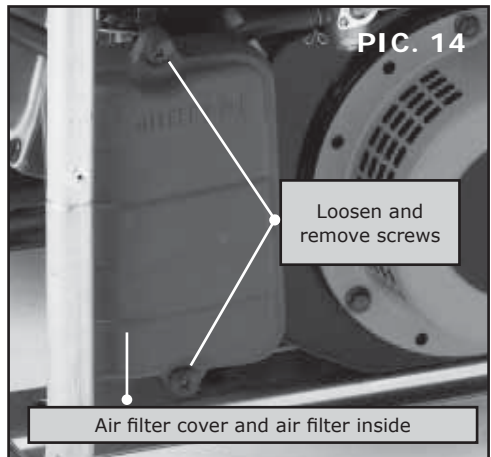


Oil

Oil should be checked daily and replaced every 50 hours (operation) or every 3 months which ever occurs first or whenever considered necessary, see Pic. 15.

To check or change oil;

1. Remove oil plug and check oil level, refer page 11 for oil level. Top up if required.
2. To change oil remove the sump plug and drain oil into a suitable container and dispose of in an environmentally responsible manner.
3. Replace sump plug.
4. Fill with clean fresh oil as per page 9.
5. Check oil level as per page 11.
6. Fit and tighten the oil plug.

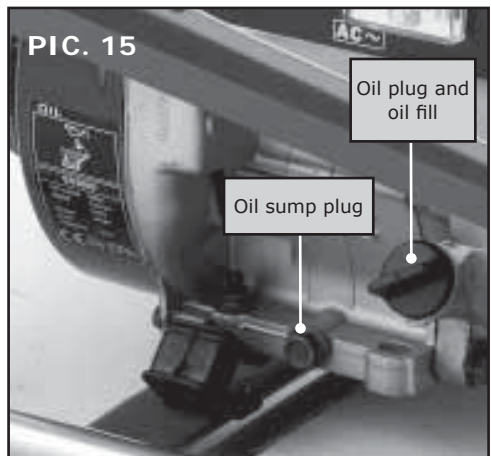

Cleaning

ENSURE the generator is NOT running whilst cleaning. To keep the generator clean, always wipe down after use. Wear eye protection when cleaning. Only clean the generator with a damp soft cloth. NEVER use liquid or solvents of any type. Ensure ventilation slots are kept clean and free from dust/dirt build up.

TROUBLE SHOOTING

| Engine will not start | |
|---------------------------------|---------------------------------|
| Possible Cause | Suggested Fix |
| No or low fuel in the fuel tank | Fill fuel tank |
| No or low oil in sump | Fill oil sump |
| Fuel/Engine lever is 'OFF' | Turn fuel/engine lever 'ON' |
| Choke is set to 'RUN' | Slide choke to 'START' |
| Possible no spark | Check/replace spark plug |
| Generator is loaded on start up | Remove appliance from generator |

| No AC electrical output | |
|----------------------------------|-----------------------------------|
| Possible Cause | Suggested Fix |
| Output power overload activated | Stop generator, refer to page 16 |
| Faulty power cord on device used | Replace cord on device being used |
| Faulty power socket | Have service agent replace socket |

| Generator overheating | |
|--------------------------|--|
| Possible Cause | Suggested Fix |
| Insufficient ventilation | Check and clean ventilation slots. Move to a more adequate supply of fresh air |

Repairs

Repairs to your generator should only be carried out by an authorised service agent.

Call BLACKRIDGE for your closest centre, Aust.
Aust. 1300 660 457 N.Z. 0800 474 876.

PARTS DIAGRAM



User replaceable parts listed below. All other parts must be serviced/replaced by an authorised service agent.

| Part | Description | SMG Part No. |
|------|----------------|---------------|
| 1 | Fuel Tank | 84 BRG1600FT |
| 2 | Fuel Tank Cap | 84 BRG1600FTC |
| 3 | Engine Switch | 84 BRG1600SW |
| 4 | Volt Meter | 84 BRG1600VM |
| 5 | Hour Meter | 84 BRG1600HM |
| 6 | Engine Mounts | 84 BRG1600MMB |
| 7 | Oil Plug | 84 BRG1600OP |
| | Air Filter | 84 BRG1600AFA |
| | Recoil Starter | 84 BRG1600RS |
| | Earth Lead | 2500-1-035 |

SERVICE LOG

Purchase Date _____

Place of Purchase _____

This Service is to be complete within 50 hours or 3 months of purchase, which ever comes first.

| Replace | Check & Adjust |
|---|----------------|
| Fuel tank filter | Spark plug |
| Fuel line filter | |
| Air filter | |
| Oil | |
| Authorised Service Agent (Name or Company Stamp) | |
| Technician | |
| Date | |

This Service is to be complete within 100 hours or 6 months of purchase, which ever comes first.

This Service is to be complete within 150 hours or 9 months of purchase, which ever comes first.

This Service is to be complete within 200 hours or 12 months of purchase, which ever comes first.

For any queries or assistance call Customer Service

 **AUST. 1300 660 457 NZ 0800 474 876**

Hours of operation: Monday to Friday 8.30am - 5.30pm AEST

Do not return to place of purchase.

Keep your purchase receipt, this will be required to make any claims under the 12 month warranty.

BLACKRIDGE®