

3000KG SCREW/PIN PAIR CAR STANDS



Value you can trust

3000KG SCREW/PIN PAIR CAR STANDS

Owners/Instruction Manual

MEETS AUSTRALIAN/
NEW ZEALAND STANDARD
AS/NZS 2538:2004



Manufactured and packaged for SUPER CHEAP AUTO PTY LTD ABN 64 085 395 124
751 Gympie Road, Lawnton, Queensland 4501, Australia

PLU 325730

WARRANTY

This product is guaranteed against defects for a period of 12 months from date of purchase. This warranty is provided by Super Cheap Auto Pty Ltd ACN 085 395 124 (Supercheap Auto) of 751 Gympie Rd Lawnton QLD 4501 Ph (07) 3482 7500. Supercheap Auto will offer a repair, replacement product or store credit if the product is assessed as being defective during the warranty period.

To claim under this warranty, take this product to the Front Service Desk of your nearest Supercheap Auto store. For store locations, visit www.supercheapauto.com.au (AUS) or www.supercheapauto.co.nz (NZ). You will need your receipt or proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt or a bank statement, identification showing your name, address and signature may be required to process your claim.

This product may need to be sent to the manufacturer to assess the defect before determining any claim. Faults or defects caused by product modification, misuse and abuse, normal wear and tear or failure to follow user instructions are not covered under this warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any expenses incurred relating to the return of this product to store will normally have to be paid by you. For more information contact your nearest Supercheap Auto store.

The benefits to the consumer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods and services to which this warranty relates.

WARNING

To use this unit correctly and safely, be sure to read this instruction manual before use. Keep this manual in a safe place for later reference.

SAFETY INSTRUCTIONS:

- Do not exceed rated capacity
- Use the vehicle support stands on a hard level surface, preferably concrete
- Use the vehicle support stands as a matched pair
- Check that no part of the underbody of the vehicle will foul as the vehicle support stands are positioned
- Ensure that the locking mechanism (U-shaped adjustment pin) is fully engaged
- Chock the unlifted wheels of the vehicle
- Avoid off-centred loading on the vehicle support stands
- Do not extend the height of the vehicle support stands beyond its maximum working height

ASSEMBLY & OPERATION

CONSULT PARTS DIAGRAM BEFORE READING THIS SECTION

INSPECTION:

- Inspect the vehicle support stands before each use. If the vehicle support stands or any part of them is in anyway bent, broken or cracked, the stands should not be used.

ASSEMBLY:


- The vehicle support stands come pre-assembled with an adjustable upper column inserted into the lower column.

OPERATION:

1. Adjust upper column of vehicle support stand to desired height. Secure the upper and lower columns by inserting the height adjustment pin.
2. Ensure that the height adjustment pin passes fully through both inner and outer tubes of the vehicle support stand. Failure to do so may result in injury or death.
3. Position the stand under the vehicle ensuring the load is positioned in the centre of the saddle.
4. Always use vehicle support stands in matching pairs and only on parts of vehicles that can sustain the load. Consult the vehicle owners' manual for the correct lift and support points.

6. Check to ensure that the load is secure and stable before commencing work under the vehicle.
7. When finished working on the vehicle, carefully lift the load off the vehicle support stands and remove the stands from under the vehicle.
8. For easy storage, remove height adjustment pin and lower stands.

PARTS DIAGRAM

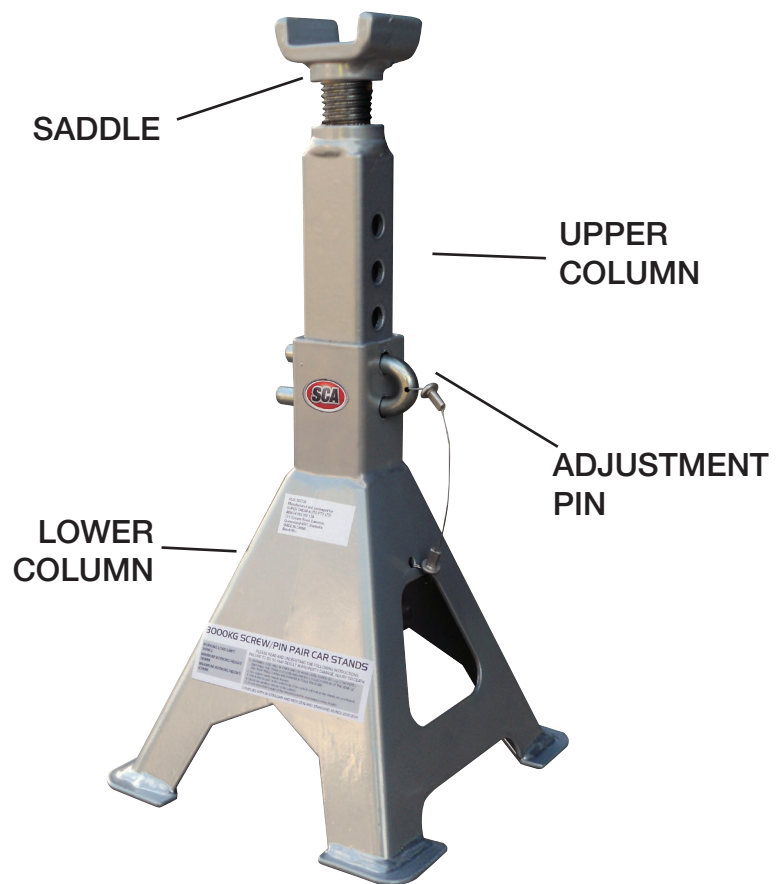

SPECIFICATIONS

WORKING LOAD LIMIT: 3000KG
HEIGHT LOWERED: 340MM
HEIGHT RAISED: 470MM