



Owner's Manual

- Always read and follow the instructions before use. **Be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.**
- **Keep all flame and heat sources away from this gazebo.**
- The gazebo is designed to provide shade only and should not be used as a permanent shelter or dwelling. Do not use this gazebo in strong wind and rain. Wind and rain can damage the gazebo and could result in injury to you and others.
- **Always stake or weigh down your gazebo at all times once set up. This gazebo is NOT a permanent structure.** Do not leave the gazebo unattended.
- Take down and store it away after use. This gazebo requires a minimum of two people to erect. Keep all children away from the assembly area.

Care and Maintenance

- Wash frame and canopy with a mild solution of soap and water, rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the storage bag after use. Be sure the gazebo is completely dry before storing it.




1 of 2

SET-UP INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

NOTE: First Time Attachment is Required


Canopy Top and frame are shipped unattached to avoid damage. A first time set up requires that top be attached on to the frame with Velcro. Once canopy top is permanently attached, set up and take down are easily accomplished within seconds.

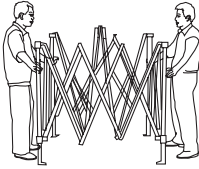


1. Stand frame upright. Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.

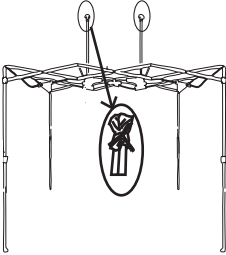

2. Take out the pockets from canopy pack and place them onto the top of center poles and tie up as an extra protection.

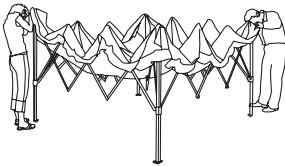


3. Place the Main Canopy over the top frame. Use the Velcro pads to secure each corner of the canopy to the frame under the plastic leg caps.

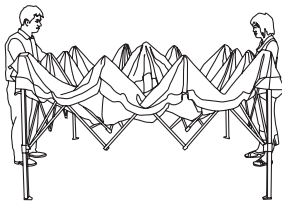

4. Each partner should then grasp the bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.

TAKE-DOWN INSTRUCTIONS

IMPORTANT : DO NOT USE EXCESSIVE FORCE DURING TAKING-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKING DOWN

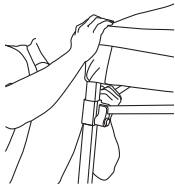

5. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand. Repeat this at the rest of corners.




6. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the other two legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the push button at knuckle and slowly pull out the inner leg until the snap button pops in next position. Repeat on the other legs. **Be careful do not overpull the leg and exceed maximum height.**



7. Attach the Velcro straps around the frame to secure canopy top.



8. Stake down the gazebo by driving the 4 small anchors through one of the holes on each base foot. This will keep the leg from moving sideways in mild weather conditions.

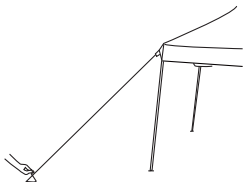


9. Measure out from the leg to a proper distance and secure the four big anchors to ground at a 45 degree angle. Tie up one end of each guy rope to the triangular shaped rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground. Make sure the guy ropes have the proper tension.


THIS GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES.




1. Detach Velcro Straps from each side of the canopy frame.

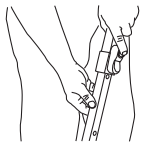


2. Release each push button on each leg and shorten the frame to its original height prior to extending the legs during set-up.

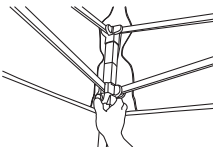


3. **CRITICAL STEP TO AVOID FRAME DAMAGE!** Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit.

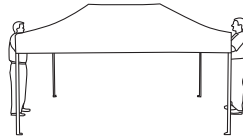

4. With partner on the opposite side, grasp the middle section of the frame and lift up slightly.

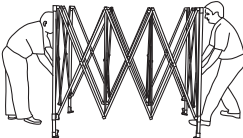


5. Walk forward slowly allowing for the frame to fold inward and close. Be careful not pinch fingers or hands as you close the frame.

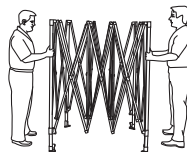

6. Completely close the frame with or without the canopy attached.



7. Place the frame into the storage bag slowly until gazebo fits comfortably. Zip the storage bag completely shut. Be sure the gazebo is completely dry before storage.

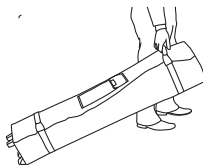

8. Wheel your portable gazebo to your desired storage area.

PLU: 348681 Code: 10LDGO0204H-SCA
Manufactured and packaged for SRGS PTY LTD
ABN 23 113 230 050
6 Coulthards Avenue Strathpine QLD 4500, Australia
Made in China