



3000kg Low Profile Garage Jack Instruction Manual



Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050
751 Gympie Road, Lawnton, Queensland 4501, Australia



3000kg Low Profile Garage Jack

Instruction Manual

Meets American Standard ASME PASE-2014



12 MONTH
WARRANTY

PLU 424148

WARRANTY

This product is guaranteed against defects for a period of 12 months from date of purchase. This warranty is provided by Super Cheap Auto Pty Ltd ACN 085 395 124 (Supercheap Auto) of 751 Gympie Rd Lawnton QLD 4501 Ph (07) 3482 7500. Supercheap Auto will offer a repair, replacement product or store credit if the product is assessed as being defective during the warranty period.

To claim under this warranty, take this product to the Front Service Desk of your nearest Supercheap Auto store. For store locations, visit www.supercheapauto.com.au (AUS) or www.supercheapauto.co.nz (NZ). You will need your receipt or proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt or a bank statement, identification showing your name, address and signature may be required to process your claim.

This product may need to be sent to the manufacturer to assess the defect before determining any claim. Faults or defects caused by product modification, misuse and abuse, normal wear and tear or failure to follow user instructions are not covered under this warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any expenses incurred relating to the return of this product to store will normally have to be paid by you. For more information contact your nearest Supercheap Auto store.

The benefits to the consumer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods and services to which this warranty relates.

WARNING

- The hydraulic trolley jack should be used on a hard level surface and be free to roll during lifting and lowering.
- The unlifted wheels of the vehicle should be chocked.
- The load should be centrally located on the head cap.
- No person should remain in a vehicle that is being lifted.
- The hydraulic trolley jack should be used for lifting and lowering only; the raised vehicle should be supported on vehicle support stands.
- No person should get bodily under a vehicle that is supported only by a hydraulic trolley jack.
- The vehicle manufacturer owner's manual should be consulted prior to the lifting of the vehicle.


ASSEMBLY INSTRUCTION

TO ASSEMBLE THE JACK FOR USE:

1. Screw together the 3 parts of the handle.
2. Insert the assembled handle into handle socket on the jack.
3. Secure the handle to the jack with the bolt provided.

SPECIFICATIONS

Working Load Limit: 3000kg
Jack Dimensions: 790mm x 364mm x 180mm
Height Lowered: 95mm
Height Raised: 550mm
This hydraulic trolley jack is designed to be used with a 120mm diameter head cap, and a handle length of 1250mm length.

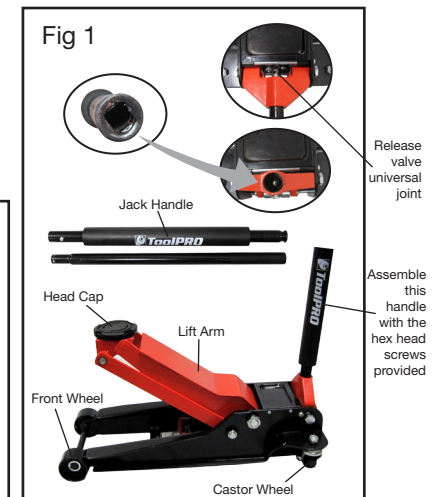

SAFETY INSTRUCTIONS & OPERATION

INSPECTION:

1. Before each use a visual inspection of the jack should be made. This should check for things such as cracks in the welds, leaking oil, any general damage, and loose or missing parts.
2. An annual inspection of the jack is recommended.
3. Do not use if any damage evident.

CAUTION BEFORE USE:

Lubricate all pivoting and moving points - see LUBRICATION on Page 5. Occasionally during shipment and/or handling, air can become trapped in the hydraulic system.

This can interfere with the jacks lifting performance. To alleviate this problem:

1. Ensure the jack is in lowered position. Open the release valve by turning the jack handle anti-clockwise.
2. Rapidly pump the jack handle several times.
3. Open the air vent by removing the filler plug on the oil chamber.
4. Replace the filler plug. This process may need to be repeated several times to purge all air out of the hydraulic system.

TO RAISE THE JACK:

1. Close the release valve by turning the jack handle clockwise until the release valve is closed. Do not over tighten the valve.
2. Chock the wheels of the car with appropriate devices (e.g. Automotive wheel chocks). This will help ensure that the vehicle will remain stable during lifting.
3. Place the jack so the head cap on the lifting arm is directly under the object to be lifted. Please refer to the vehicle manufacturer owner's manual to locate approved lifting points on the vehicle.
4. Pump the jack handle until the head cap is almost in contact with the vehicle. Check that the head cap will be centrally located at the vehicle manufacturers recommended lifting point.
5. Continue to pump the jack handle to lift the vehicle to the desired height.
6. After lifting the vehicle to the desired height, support the load with approved vehicle support stands before working under the vehicle.

TO LOWER THE JACK:

1. With the jack supporting the weight of the vehicle, remove the vehicle support stands.
2. Very slowly turn the jack handle anti-clockwise. This will open the release valve and when the release valve starts to open, the lifting arm will lower.
3. The speed which the jack will lower, will be dependent on how rapidly the valve is opened. The greater it is opened the faster the jack will lower.

CAUTION:

Ensure all hands, feet and all other items are well clear of the ground area when lowering the load.


MAINTENANCE

OIL TYPE:

IMPORTANT: When adding or replacing oil, always use a good grade of HYDRAULIC FLUID. (Recommended ISO VG32, SAE10 or equivalent) **Avoid** mixing types of fluid. **DO NOT** use Brake Fluid, Alcohol, Glycerine, Detergent, Motor Oil or Dirty Oil.

ADDING OIL & OIL LEVEL:

1. Set the jack in a horizontal level position and fully lower the head cap. Remove the screw-in filler plug on the oil chamber (Fig. 2).
2. Fill using oil can with a fine spout. The recommended oil capacity is approximately 280ml. If low, add oil as required.
3. Replace the screw-in filler plug on the oil chamber.

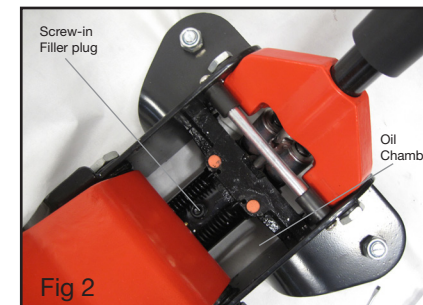

REPLACING OIL:

1. Remove the screw-in filler plug on the oil chamber.
2. Turn the jack upside down and drain the old oil out through the hole of the oil chamber (Fig. 2).
3. Fill the jack with new oil through the hole of the oil chamber.
Do not allow any dirt or other foreign material to enter the hydraulic system when re-filling.

After Re-filling the jack oil, remove any air from the hydraulic system (please refer to caution on page 3 before use)

LUBRICATION:

Lubricate all pivoting and moving points with lubricating oil prior to initial use and after every 20 lifting/lowering cycles or 3 months (whichever occurs first)


RUST PREVENTION & STORAGE:

1. Check jack every few months for any signs of rust or corrosion. Clean as needed by wiping with an oily cloth.
2. When not in use, always store jack with wheels on horizontal surface and with lifting arm lowered all the way.

TROUBLE SHOOTING

POSSIBLE PROBLEMS						POSSIBLE CAUSES AND SOLUTIONS (Refer to operation and maintenance procedures for detailed information)
Jack will not lift load	Jack will lift load, but will not hold	Jack will not lower completely	Poor jack lifting. Pump feels spongy	Jack will not lift to full height	Handle raises by itself when jack is under load	
X						Ensure that handle has been turned clockwise to a point at which it is firm/tight.
X			X	X	X	Air is in hydraulic system. Release air from system.
X	X		X	X		Oil level is low in jack. Add oil as required.
		X				1. Oil reservoir is over-filled. Drain out some oil. 2. Lubrication of all pivoting and moving parts is necessary.

PARTS LIST

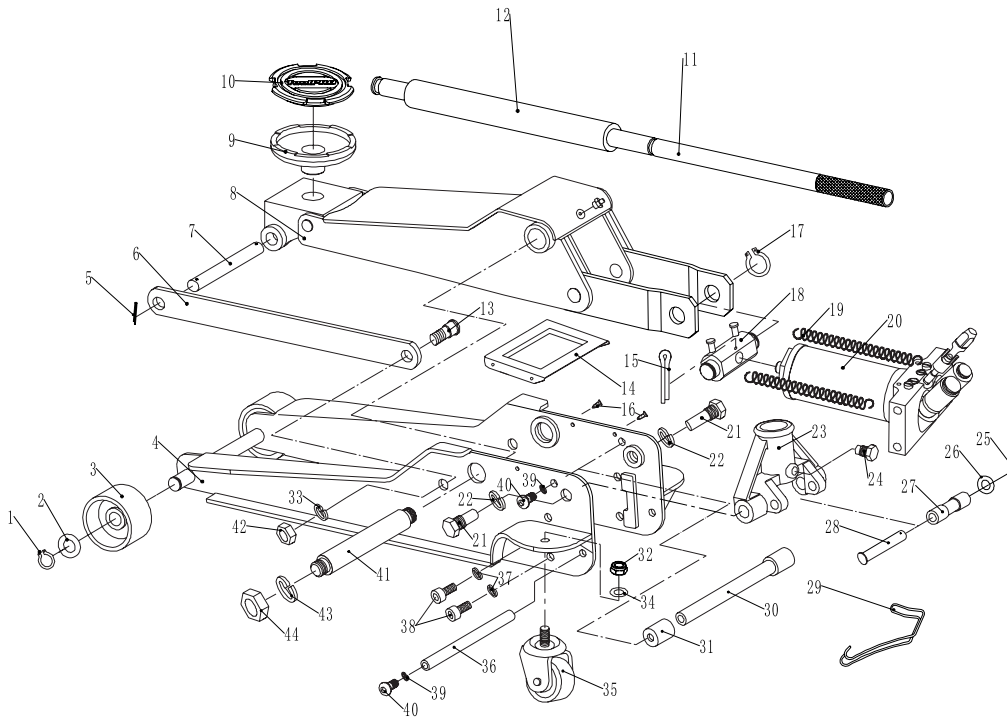

Ref. No.	Qty.	Description	Ref. No.	Qty.	Description
1	2	Retaining Ring Ø20	23	1	Handle Socket
2	2	Flat Washer Ø20	24	1	Handle Screw
3	2	Front Wheel	25	1	Cotter Pin Ø2.5*16
4	1	Main Frame	26	1	Flat Washer Ø12
5	2	Cotter Pin Ø2.5*25	27	1	Roller
6	2	Link Rod	28	1	Pin For Roller
7	1	Link Rod Shaft	29	1	Hook
8	1	Lift Arm Assembly	30	1	Handle Socket Limit Lever
9	1	Head Cap	31	2	Handle Socket Retaining Ring
10	1	Rubber	32	2	Lock Nut
11	1	Handle	33	2	Spring Washer Ø16
12	1	Foam	34	2	Flat Washer Ø16
13	2	Bolt For Link Rod	35	2	Rear Castor Wheel
14	1	Cover Plate	36	1	Reinforcing Spindle
15	1	Cotter Pin Ø4*45	37	4	Spring Washer Ø12
16	4	Screw	38	4	Hex Head Screw M12*25
17	2	Retaining Ring Ø25	39	4	Spring Washer
18	1	Ram Connecting Rod	40	4	Hex Head Screw
19	2	Tension Spring	41	1	Lift Arm Shaft
20	1	Hydraulic Ram Assembly	42	2	Nut
21	2	Bolt For Handle Socket	43	2	Spring Washer Ø24
22	2	Spring Washer Ø18	44	2	Hexagonal Nut