

220KG ALUMINIUM BIKE RAMP



Value you can trust



220KG ALUMINIUM BIKE RAMP

Instruction Manual



Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050
751 Gympie Road, Lawnton, Queensland 4501, Australia

PLU 531571

WARRANTY

This product is guaranteed against defects for a period of 12 months from date of purchase. This warranty is provided by Super Cheap Auto Pty Ltd ACN 085 395 124 (Supercheap Auto) of 751 Gympie Rd Lawnton QLD 4501 Ph (07) 3482 7500. Supercheap Auto will offer a repair, replacement product or store credit if the product is assessed as being defective during the warranty period.

To claim under this warranty, take this product to the Front Service Desk of your nearest Supercheap Auto store. For store locations, visit www.supercheapauto.com.au (AUS) or www.supercheapauto.co.nz (NZ). You will need your receipt or proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt or a bank statement, identification showing your name, address and signature may be required to process your claim.

This product may need to be sent to the manufacturer to assess the defect before determining any claim. Faults or defects caused by product modification, misuse and abuse, normal wear and tear or failure to follow user instructions are not covered under this warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any expenses incurred relating to the return of this product to store will normally have to be paid by you. For more information contact your nearest Supercheap Auto store.

The benefits to the consumer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods and services to which this warranty relates.

WARNING

To avoid personal injury and/or property damage, please read and follow ALL of these instructions before assembling and operating.

1. NEVER OVERLOAD RAMPS. MAXIMUM CAPACITY FOR YOUR RAMP IS 220 KG PER PIECE (ALL LOADS MUST BE EVENLY DISTRIBUTED). CHECK THE RATED CAPACITY OF THE VEHICLE BEFORE USING THE RAMPS. USE ONLY ONE PAIR PER VEHICLE.

2. MAXIMUM RECOMMENDED HEIGHT IS 76 CM.

3. Always use safety strap to securely fasten the ramp to the vehicle. This prevents the ramp from slipping off of the tailgate.

4. Carefully roll or winch equipment up or down the ramp.

NEVER DRIVE OR RIDE YOUR EQUIPMENT WHILE LOADING OR UNLOADING.

5. Make sure the ramp is aligned with the wheels of the equipment being loaded or unloaded.

6. Always load or unload on a solid, level and stable surface with the vehicle in gear, the parking/emergency brake on and the engine off.

7. Use as loading ramp only.

8. Ramp surfaces must be clean, dry and free from oil or grease or water.

9. Inspect ramp before each use. Tighten any loose hardware. Replace any worn or damaged parts. Replace safety strap if webbing is frayed or worn. Do not attempt to use a ramp that is damaged in any way. No modification, alteration or deviation to the ramp are authorized by the manufacturer and shall not be made. Proper care and maintenance of the ramp is essential to safety.

SPECIFICATIONS

Rated Capacity	220 kg distributed load
Ramp dimensions unfolded	181 cm x 29 cm
Ramp dimensions folded	92 cm x 29 cm x 15 cm

USAGE

Step 1

Be sure you are loading on the hard, level and stable surface and that the vehicle you are loading into is parked with the emergency/parking brake in "Park" and the engine is "off". Unfold and Place the lip edge of the ramp against the tailgate of the vehicle .**THE TAILGATE SHOULD NOT BE MORE THAN 76 CM IN HEIGHT** or the ramp incline will be too steep.

Step 2

Secure the ramp to the vehicle using the adjustable strap. After the strap is secure, test the ramp by pulling backwards on it. Make sure it does not slide back or disengage from the loading surface.

Step 3

Once the ramp is secure and the area is safe to proceed with loading, move the vehicle to be loaded between the ramps and center the load between both ramp rails.

Step 4

Proceed with loading the vehicle, making sure that the ramp is sustaining the load and not bowing from the weight.

Step 5

Continue until the vehicle being fully loaded. Secure the brake and tie down as needed.

Step 6

Unhook the adjustable strap and fold the ramp. Store in a clean, dry and safe place where damage will not occur.

