



2000kg Ratchet Car Stands Owners/Instruction Manual



Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050
751 Gympie Road, Lawnton, Queensland 4501, Australia



2000kg Ratchet Car Stands

Owners/Instruction Manual

COMPLIES WITH CONSUMER GOODS (VEHICLE
SUPPORT STANDS) SAFETY STANDARD 2017



WARRANTY

This product is guaranteed against defects for a period of 12 months from date of purchase. This warranty is provided by Super Cheap Auto Pty Ltd ACN 085 395 124 (Supercheap Auto) of 751 Gympie Rd Lawnton QLD 4501 Ph (07) 3482 7500. Supercheap Auto will offer a repair, replacement product or store credit if the product is assessed as being defective during the warranty period.


To claim under this warranty, take this product to the Front Service Desk of your nearest Supercheap Auto store. For store locations, visit www.supercheapauto.com.au (AUS) or www.supercheapauto.co.nz (NZ). You will need your receipt or proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt or a bank statement, identification showing your name, address and signature may be required to process your claim.

This product may need to be sent to the manufacturer to assess the defect before determining any claim. Faults or defects caused by product modification, misuse and abuse, normal wear and tear or failure to follow user instructions are not covered under this warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any expenses incurred relating to the return of this product to store will normally have to be paid by you. For more information contact your nearest Supercheap Auto store.

The benefits to the consumer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods and services to which this warranty relates.



WARNING

INCORRECT USE MAY RESULT IN INJURY OR DEATH!

USE ONLY IN PAIRS AND ON FLAT HARD LEVEL SURFACES (e.g. CONCRETE), ENSURING THE STAND IS POSITIONED UNDER A SOLID PORTION OF THE VEHICLE AND THAT THE LOCKING MECHANISM IS FULLY ENGAGED

WARNING

To use this unit correctly and safely, be sure to read this instruction manual before use. Keep this manual in a safe place for later reference.

INSTRUCTIONS FOR USE

Each stand shall be supplied with clear instructions explaining the safe use of the stand. The instructions shall include the following recommendations:

- Confirm that the load to be applied does not exceed the working load limit of the vehicle support stands.
- Conduct a pre-operational check of the equipment.
- Use vehicle support stands on a hard level surface, such as concrete.
- Use vehicle support stands in pairs.
- Check that no part of the underbody of the vehicle will foul as the stands are positioned.
- Ensure that each stand is securely located under a strong point of the vehicle. Consult the vehicle manufacturer's manual for guidance.
- Ensure that the locking mechanism is fully engaged.
- Chock the unlifted wheels of the vehicle.
- Do not extend the height of the stand beyond its maximum working height, nor use any item such as bricks or timber to support the vehicle.
- Modifications MUST NOT be carried out or accessories added.

ASSEMBLY & OPERATION

CONSULT PARTS DIAGRAM BEFORE READING THIS SECTION

INSPECTION:

- Inspect the car stands before each use. If the car stands or any part of them is in anyway bent, broken or cracked, the stands should not be used.

ASSEMBLY:

1. Insert ratchet bar into the stand frame.
2. Bend tab inwards to prevent ratchet bar exceeding maximum height during use.

OPERATION:

1. Slide car stands to the proper position points referred to in the vehicle manufacturer's manual. Make sure the car stands are on the same point on each side of the vehicle. Raise the car stands until they are just below the jack contact point of the vehicle.
2. Centre the load on the saddle of the ratchet bar. Gently lower the vehicle with jack.


It may drop down a very small amount until the ratchet bar catches on the ratchet handle. Repeat on the other side.

3. Always use car stands in pairs and only on parts of a vehicle that can sustain the load. Consult the vehicle manufacturer's manual for the correct lift and support points.
4. Check to ensure that the load is secured and stable before commencing work under the vehicle.

REMOVING:

1. Raise the vehicle with a jack to take the load off the car stands.
2. Raise the ratchet handle on the car stands and lower the ratchet bar.
3. Remove the car stands. Use the floor jack to safely lower the vehicle to the ground.

PARTS DIAGRAM

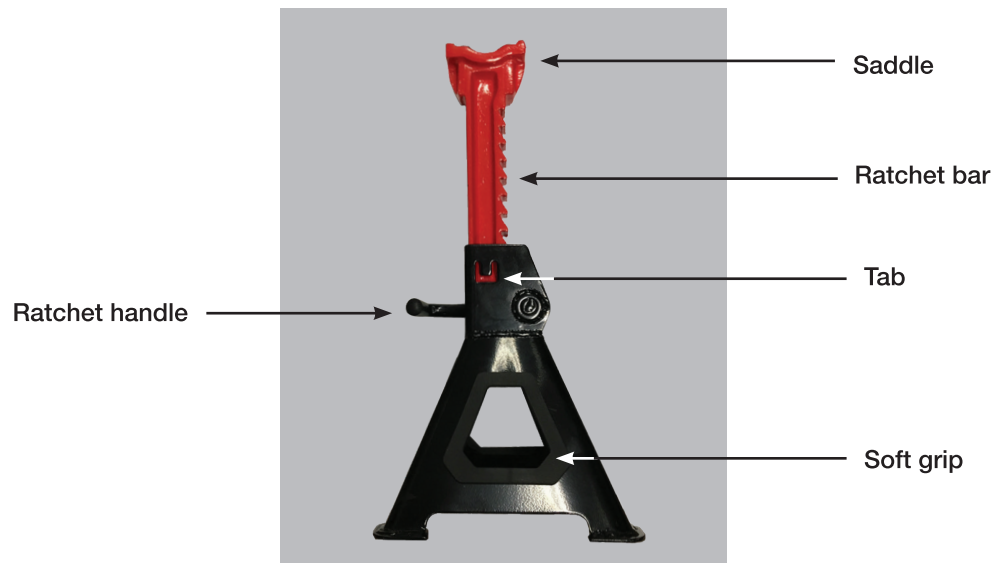

SPECIFICATIONS

WORKING LOAD LIMIT: 2000KG
MINIMUM WORKING HEIGHT: 292MM
MAXIMUM WORKING HEIGHT: 425MM