



## GREASE GUN INSTRUCTION MANUAL

### WARRANTY

This product is guaranteed against defects for a period of 12 months from date of purchase. This warranty is provided by Super Cheap Auto Pty Ltd ACN 085 395 124 (Supercheap Auto) of 751 Gympie Rd Lawnton QLD 4501 Ph (07) 3482 7500. Supercheap Auto will offer a repair, replacement product or store credit if the product is assessed as being defective during the warranty period.

To claim under this warranty, take this product to the Front Service Desk of your nearest Supercheap Auto store. For store locations, visit [www.supercheapauto.com.au](http://www.supercheapauto.com.au) (AUS) or [www.supercheapauto.co.nz](http://www.supercheapauto.co.nz) (NZ). You will need your receipt or proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt or a bank statement, identification showing your name, address and signature may be required to process your claim.

This product may need to be sent to the manufacturer to assess the defect before determining any claim. Faults or defects caused by product modification, misuse and abuse, normal wear and tear or failure to follow user instructions are not covered under this warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any expenses incurred relating to the return of this product to store will normally have to be paid by you. For more information contact your nearest Supercheap Auto store.

The benefits to the consumer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods and services to which this warranty relates.

 
Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050  
751 Gympie Road, Lawnton, Queensland 4501, Australia  
MADE IN TAIWAN



## GREASE GUN INSTRUCTION MANUAL

## INSTRUCTIONS


### Step 1



Unscrew the gun head from the container tube.

### Step 2

 (A)

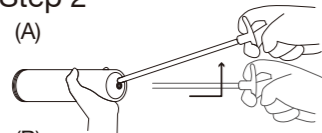

Pull back the rod handle and lock into position

(A) Push-lock style

Pull the rod handle through the tube and pull into the slotted end cap.

(B)



(B) Stopper style

Pull back the handle to automatically lock the rod by stopper in the position.

\*For illustration purpose only, not necessarily reflects the actual model.

### Step 3: Grease loading



#### CARTRIDGE LOADING:

 
1. Remove the cap from the open end of grease cartridge and insert into the empty container tube fully.
2. Remove the metal pull tab seal from the grease cartridge.



#### BULK LOADING:

Fill bulk grease into empty container tube, until the tube is completely full.  
Note: Remove used cartridge from container tube to bulk loading.

### Step 4




Screw gun head back onto the container tube and leave 1-2 turns.

Note: Do not completely tighten gun head.

### Step 5

 (A)

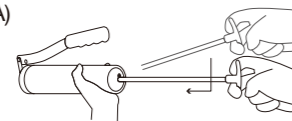


Unlock the rod handle from the end cap.

(A) Push-lock style

Release the rod handle from the slotted end cap, and push down the rod handle into the tube.

 (B)



(B) Stopper style

Press the stopper to release rod handle from end cap, and at the same time push down the rod handle into the tube.

### Step 6

 
Press trigger until grease comes out. Tighten gun head fully and screw spout firmly. The grease gun is ready for use now.

## TROUBLESHOOTING

### ● How to release air pockets

After loading grease, it's a common occurrence that air pockets exist between gun head & container tube. To fix this problem & to release the air pockets inside completely, try and press the bleeder valve (if available) a few times first. If it still doesn't prime, take the following steps:

#### Step 1

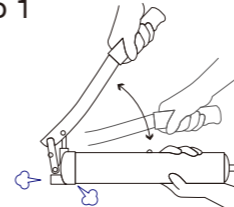


Take off spout from gun head.

Unscrew tube 1-2 turns from gun head.

Press trigger until grease comes out.


Note: During air pockets release process, do not attempt to pull the rod handle as it will create more air pockets inside.

#### Step 2

 


Re-tighten gun head and re-screw spout firmly. Then, it's read to use.

### ● How to detach spout from grease nipple

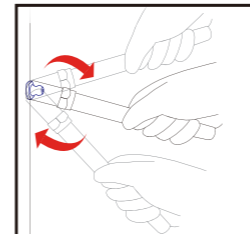 

 ✓ Gently swirl off to detach from grease nipple.

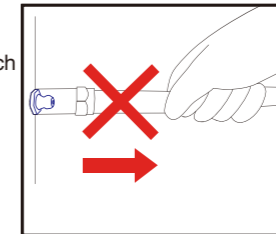

✗ DO NOT force to detach the grease nipple horizontally. Otherwise, the spout jaws and the grease nipple will be damaged.

| PROBLEM   | POSSIBLE CAUSE   | SOLUTIONS   |
|---|--|---|
| Doesn't prime. (This commonly happens to BULK loading.) | Air pockets inside tube  | 1. Take off spout from gun head.<br>2. Unscrew tube 1-2 turns from gun head.<br>3. Press trigger until grease comes out.<br>4. Re-tighten gun head and re-screw spout firmly. Then, it's ready to use.<br><b>NOTE:</b> During air pockets release process, DO NOT attempt to pull the rod handle as it will create more air pockets inside. |
| Plunger doesn't go into the tube.                       | 1. Cartridge size is wrong<br>2. Cartridge end is damaged or rough | 1. Check and use the right cartridge size.<br>2. Apply grease on plunger and cartridge end to ease entering the tube.<br>3. Do not re-use the used grease cartridge.<br>4. Remove the used cartridge from tube when bulk loading.   |
| Leakage from head outlet or hose connection             | 1. Spout is not securely screwed<br>2. Poor connection             | 1. Use tool to screw in the taper thread. Do not just screw by hand.<br>2. Use thread seal tape on thread connection.   |
| Spout cannot detach from grease nipple                  | Inappropriate handling   | Slightly swirl off to detach from grease nipple.  |