

# 1200KG PIN TYPE CAR STANDS



*Value you can trust*



Manufactured and packaged for SRGS PTY LTD ABN 23 113 230 050  
751 Gympie Road, Lawnton, Queensland 4501, Australia

## 1200KG PIN TYPE CAR STANDS

### *Owners/Instruction Manual*

COMPLIES WITH CONSUMER GOODS  
(VEHICLE SUPPORT STANDS) SAFETY STANDARD 2017



PLU 563850

# WARRANTY

This product is guaranteed against defects for a period of (12 months) from date of purchase. This warranty is provided by SRGS PTY LTD ABN 23 113 230 050 of 751 Gympie Rd Lawnton QLD 4501 Ph (07) 3482 7500. Supercheap Auto will offer a repair, replacement product or store credit if the product is assessed as being defective during the warranty period.

To claim under this warranty, take this product to the Front Service Desk of your nearest Supercheap Auto store. For store locations, visit [www.supercheapauto.com.au](http://www.supercheapauto.com.au) (AUS) or [www.supercheapauto.co.nz](http://www.supercheapauto.co.nz) (NZ). You will need your receipt or proof of purchase. Additional information may be requested of you to process your claim. Should you not be able to provide proof of purchase with a receipt or a bank statement, identification showing your name, address and signature may be required to process your claim.

This product may need to be sent to the manufacturer to assess the defect before determining any claim. Faults or defects caused by product modification, misuse and abuse, normal wear and tear or failure to follow user instructions are not covered under this warranty.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Any expenses incurred relating to the return of this product to store will normally have to be paid by you. For more information contact your nearest Supercheap Auto store.

The benefits to the consumer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods and services to which this warranty relates.



## WARNING

INCORRECT USE MAY RESULT IN INJURY OR DEATH!

USE ONLY IN PAIRS AND ON FLAT HARD LEVEL SURFACES (e.g. CONCRETE), ENSURING THE STAND IS POSITIONED UNDER A SOLID PORTION OF THE VEHICLE AND THAT THE LOCKING MECHANISM IS FULLY ENGAGED

# WARNING

To use this unit correctly and safely, be sure to read this instruction manual before use. Keep this manual in a safe place for later reference.

## INSTRUCTIONS FOR USE

- Confirm that the load to be applied does not exceed the working load limit of the vehicle support stands.
- Conduct a pre-operational check of the equipment.
- Use vehicle support stands on a hard level surface, such as concrete.
- Use vehicle support stands in pairs.
- Check that no part of the underbody of the vehicle will foul as the stands are positioned.
- Ensure that each stand is securely located under a strong point of the vehicle. Consult the vehicle manufacturer's manual for guidance.
- Ensure that the locking mechanism is fully engaged.
- Chock the unlifted wheels of the vehicle.
- Do not extend the height of the stand beyond its maximum working height, nor use any item such as bricks or timber to support the vehicle.
- Modifications MUST NOT be carried out or accessories added.

## ASSEMBLY & OPERATION

CONSULT PARTS DIAGRAM BEFORE READING THIS SECTION

### INSPECTION:

- Inspect the car stands before each use. If the car stands or any part of them is in anyway bent, broken or cracked, the stands should not be used.


### ASSEMBLY:

- The car stands come pre-assembled with an adjustable upper column inserted into the lower column.

### OPERATION:

1. Adjust upper column of car stand to desired height. Secure the lower column with upper column by fully inserting the U-shaped load pin into locking holes.
2. Ensure that the U-shaped pin when fully inserted into columns is secured by using the locking pin.
3. Position the car stand so that the point of contact with the vehicle being lifted will be in the centre of the saddle.
4. Always use car stands in matching pairs and only on parts of vehicles that can sustain the load. Consult the manufacturer's manual for the correct lift and support points.
5. Slowly lower the load onto the car stands.
6. Check to ensure that the load is secured and stable before commencing work under the vehicle.
7. When vehicle work is finished, carefully lift the load off the car stands and remove the stands from under the vehicle.
8. For easy storage, remove locking pin and U-shaped load pin to lower upper column.

### PARTS DIAGRAM

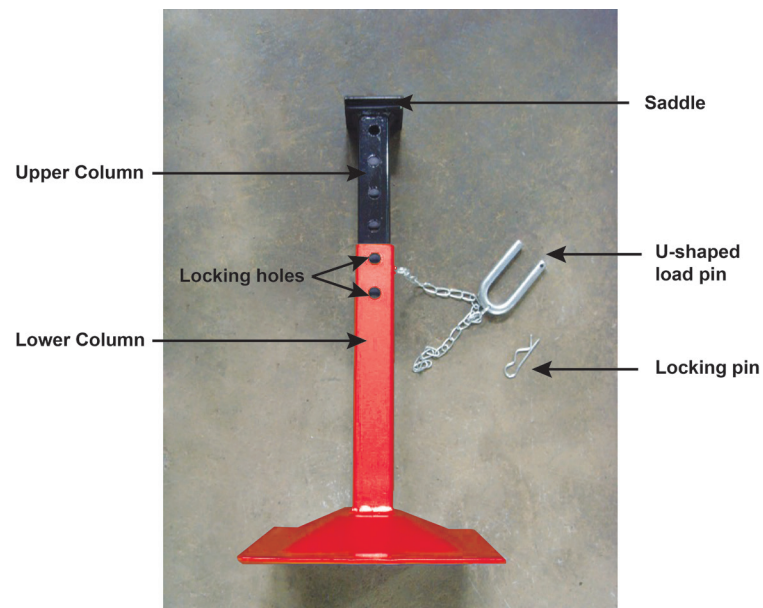

### SPECIFICATIONS

WORKING LOAD LIMIT: 1200KG  
MINIMUM WORKING HEIGHT: 290MM  
MAXIMUM WORKING HEIGHT: 418MM