



Anker Innovations Limited. All rights reserved. eufy Security and eufy Security Logo are trademarks of Anker Innovations Limited, registered in the United States and other countries. All other trademarks are the property of their respective owners.

51005002021 V02

# User Manual

## eufy Security Alarm Kit

# TABLE OF CONTENTS

How the System Works	01
Adding Your Devices to the System	02
Key Features	04
Automation	05


## HOW THE SYSTEM WORKS

### eufy Security Ecosystem

The eufy Security ecosystem includes a series of integrated devices, such as HomeBase, eufyCam, entry sensor, motion sensor, and Keypad. When these devices are connected to the HomeBase via the eufy Security app, the Homebase will monitor all the devices in your house to see if there are any issues. Once faults are detected, the HomeBase will set off an alarm or send notifications to alert users.

With HomeBase at the core of the network, each connected device complies with the security rules that are set in the eufy Security app for a given scenario. The eufy Security ecosystem allows for automation among all of your devices.

The following picture shows the eufy Security ecosystem.

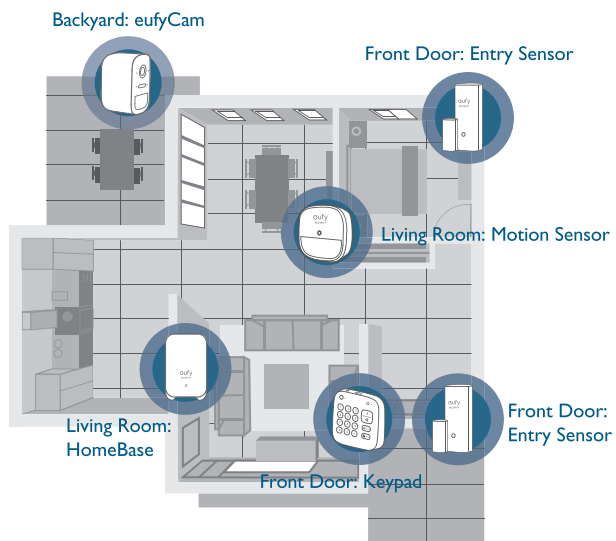 

## ADDING YOUR DEVICES TO THE SYSTEM

### Download the eufy Security App

 
1. Download the eufy Security app from the App Store (iOS devices) or Google Play (Android devices).




2. Sign up a eufy Security account.

## Add HomeBase to the System

1. Power on the HomeBase, and then use the ethernet cable provided to connect HomeBase to your home router. The HomeBase can also be connected via Wi-Fi through the eufy Security app.

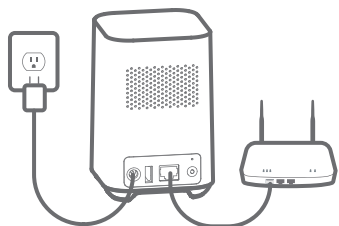

 2. The LED indicator will turn blue (this may take up to 1 minute) when HomeBase is ready for setup.

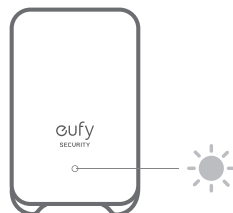

3. Follow the on-screen instructions on the eufy Security app to add Homebase to the system and to complete the setup.

## Add Other Devices

Follow the instructions in the Entry Sensor / Motion Sensor / Keypad User Manual to add each device to your system.

## KEY FEATURES

### Security Mode

On the eufy Security app, go to the Security page to set your security modes: Away, Home, Customize and Disarm. In each security mode, the device list displays all devices connected to the same HomeBase. You could customize whether the HomeBase rings an alarm or sends you alarm alert notifications when the device is triggered.

**Away mode:** All sensors are activated and your house will be monitored. The system is armed and operational. Any human or entry will be detected and an alarm will be triggered. Recommended using when you are away from home.

**Home mode:** Interior sensors are disabled, while exterior sensors are activated. Recommended using when you are at home and want to be alerted about any potential break-ins outside the house.

**Customize mode:** Recommended if you feel a customized security mode is needed to match your specific life requirements.

**Disarm mode:** All detection functions are disabled. No sensors are activated and no alarm alerts will be sent. Recommended using when you are experiencing issues with your devices. The Away, Home, and Customize modes can be edited. You can choose to push notifications or send alarm alerts on the eufy Security app.

**Note:** You can set a leaving delay and alarm delay in each mode.

#### • Leaving Delay

If you activate a security mode with an alarm action and you have to pass by a triggered device before leaving your house, you can set a delay time. The delay allows you to leave home without triggering any alarm. You should leave the house before the countdown ends.

By default, the leaving delay is disabled in each security mode. When you need to set leaving delay for a certain mode, you can select the device that needs the delay and determine a countdown from 0s to 300s.

- **Alarm Delay**

If you have activated a security mode that has a Homebase alarm action you can set a delay time before the alarm will sound. The alarm delay feature leaves you enough time to enter the house and switch the security mode on the Keypad before the alarm sounds.

By default, the alarm will sound immediately once any device is triggered. If you need to set alarm delay for a certain device, select the device that requires the delay, and set a time from 0s to 300s.

## AUTOMATION

The Automation feature allows a device that is set as a trigger to activate other devices which are connected to the same HomeBase. For example, you can set the motion sensor as a trigger and specify the eufyCam action. Once the motion sensor detects movement, the eufyCam will start recording video.

You can create your own automation on the eufy Security app.

Open the eufy Security app homepage.

Tap the "Security" tab.

Tap the "Automation" tab. Choose a trigger and add an action as you desire. The automation will be activated automatically according to the settings you create.

