

PORTABLE ESPRESSO COFFEE MAKER

RE-CHARGEABLE

Operation Manual



SAFETY WARNING

Please read the following points and the instructions for use to avoid personal injury or damaging the Espresso Maker.

- This **Espresso Maker** is for personal use only.
- After opening the box, ensure all accessories are inside before use.
- Please keep out of reach of children.
- Do not drink directly from the **Espresso Maker**.
- Avoid putting the **Espresso Maker** in or on any heat source such as ovens, microwaves, gas or electric hotplates or dishwashers.
- Only use water in the water tank, do not use other liquids such as milk.
- Do not exceed the 60mL maximum capacity of the water tank.
- Do not run the **Espresso Maker** twice without emptying the extracted coffee in the cup or it will overflow.
- Please clean the **Espresso Maker** after each use, wash the accessories with dish washing detergent and water, use a dry cloth to clean the body of the **Espresso Maker**.
- Do not immerse the body of the **Espresso Maker** in water or any kind of liquid.

BATTERY DISPOSAL

- The Lithium Ion rechargeable battery in this **Espresso Maker** can be a fire hazard and should NEVER be put in your recycling or waste bin.
- Battery **MUST** be recycled or disposed of properly.
- **DO NOT** short, incinerate or open battery.
- Please contact your local council for more information about the correct recycling or disposal process.

SPECIFICATIONS

Pump Pressure:	18 Bar
Battery Capacity:	2500mAh
Water Tank Capacity:	60mL Max.
Coffee Cup:	1 Cup
Capsule Coffee:	Nespresso Style Pod
Ground Coffee:	8g
Dimensions:	L75 x W75 x H218mm
Weight:	780g

FEATURES

Water Heating Time: 5 Minutes

Extraction Time: 25 - 30 Seconds

Charging Time: 3.5 Hours (Quick charging)

Charging Connection: USB Type-C

On a full charge make 3 cups of coffee (using cold water). If using hot water you can make up to 100 cups of coffee on one charge.

Water Heating Temperature: Up to 85°C

Coffee Temperature: Up to 76°C

BUTTON OPERATING INSTRUCTIONS

- **POWER DISPLAY MODE:** Press the button for 1 second and the battery charge level will turn on for 3 seconds.
- **HEATING MODE:** Press the button twice within 1 second to start heating, it will turn off after coffee extraction automatically.
- **DIRECT EXTRACTION MODE:** Pour hot water into the water tank, press the button for 2 seconds or more to start extraction.

CLEANING MODE

Remove used coffee pod or ground coffee from the machine.
Pour hot or cold water into the water tank, press the button for 2 seconds to extract water. Repeat if required.

COMPONENT VIEW

 
Ground coffee accessories




Ground coffee filter



Ground filter basket



Coffee scoop

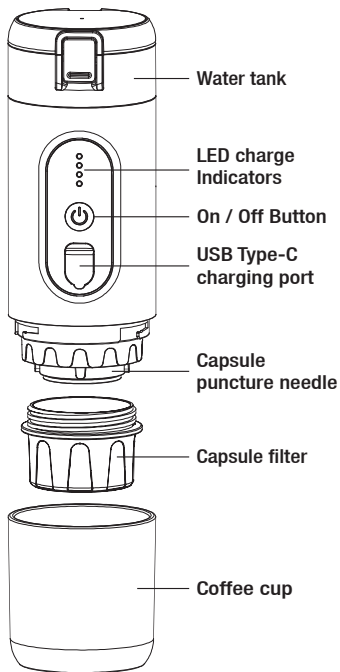 

OPERATING INSTRUCTIONS

 
Ground Coffee Extraction

7



Pour either boiling/hot or cold water into the water tank


8



If Water Heating Required:
2 quick presses of the on/off button - Machine will heat water and then extract espresso

If Hot Water Added:
Press and hold on/off button for 2-3 Seconds to start espresso extraction

 9

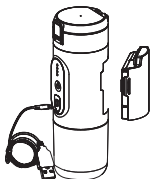

After making 3 cups of coffee recharge the coffee maker immediately

Capsule coffee accessories



Ground coffee accessories



ATTENTION: Please ensure when using this Coffee Maker for coffee extraction that you use the correct extraction accessories for the coffee type.

TO CHARGE THE COFFEE MAKER

- Ensure to use the 12V DC QC 3.0 USB charger together with the USB type-C charging cord provided to fully charge the **Espresso Maker**.
- Charging Time: 3.5 Hours

OPERATING INSTRUCTIONS

Ground Coffee Extraction

1



Remove the coffee cup and then the ground coffee filter

2



 
Fill up measuring coffee scoop with ground coffee

3



Pour the ground coffee from the coffee scoop into the ground filter basket

4



Gently press the coffee into the filter basket and remove any excess with the back of a knife

5



Put the ground filter basket into the ground coffee filter

6



Tighten the ground coffee filter and screw on the coffee cup and tighten

OPERATING INSTRUCTIONS

Capsule Coffee Extraction

1



Remove the coffee cup and then the capsule filter

2



Insert the capsule into the capsule holder

3



 
Tighten the capsule filter and screw on the coffee cup and tighten

4



Pour either boiling/hot or cold water into the water tank


5



If Water Heating Required:
2 quick presses of the on/off button - Machine will heat water and then extract espresso

If Hot Water Added:
Press and hold on/off button for 2-3 Seconds to start espresso extraction

 6

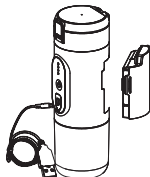

After making 3 cups of coffee recharge the coffee maker immediately

WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of **12 months**

If your product becomes defective during this period, **SRGS PTY LTD** will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do

This warranty will not cover substantially modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure

To claim the warranty, take the product to the front Service Desk of your nearest store of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim

Any expenses relating to the return of your product to the store will normally have to be paid by you. For online store purchases, **SRGS PTY LTD** will pay for the return freight for any product assessed as having a major failure

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates

This warranty is provided by **SRGS PTY LTD, 6 Coulthards Avenue, Strathpine QLD 4500, Australia. Phone: 1300 175 010.**