

# ALTIUS

## DVD HEADREST



### USER MANUAL

MODEL NO: DGDVD21CE



# WELCOME

We hope you enjoy your purchase!

ALTIUS products are carefully designed and produced to the highest standards of performance and safety, backed by our comprehensive 1 Year Warranty.

This user manual will provide all the information required for you to setup and use your new product.

 
# CONTENTS

Welcome	2
Product Overview	4
Installation	6
Remote Control	10
Operation	13
Troubleshooting	17
Specifications	18
Compliance and Responsible Disposal	19


# PRODUCT OVERVIEW

## WHAT'S IN THE BOX:

- A. DVD Headrest
- B. Wireless 2-in-1 Game Console Remote
- C. AAA batteries
- D. Installation Tubes
- E. AV Cable Bundle
- F. 12V Car Power Adaptor
- G. Set of Earphones
- H. User Manual
- I. Warranty Card
- J. General Safety Warnings

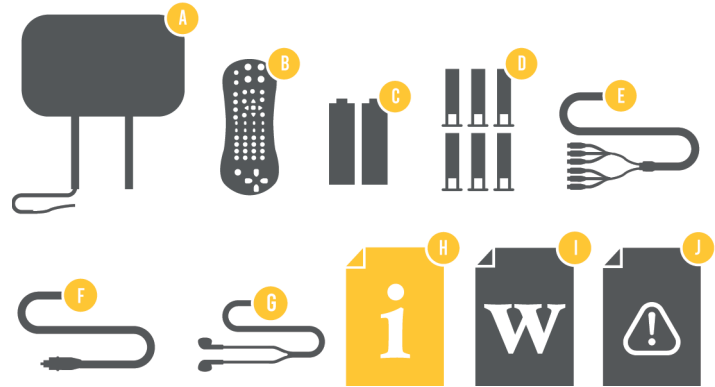

## BUTTONS AND FUNCTIONS

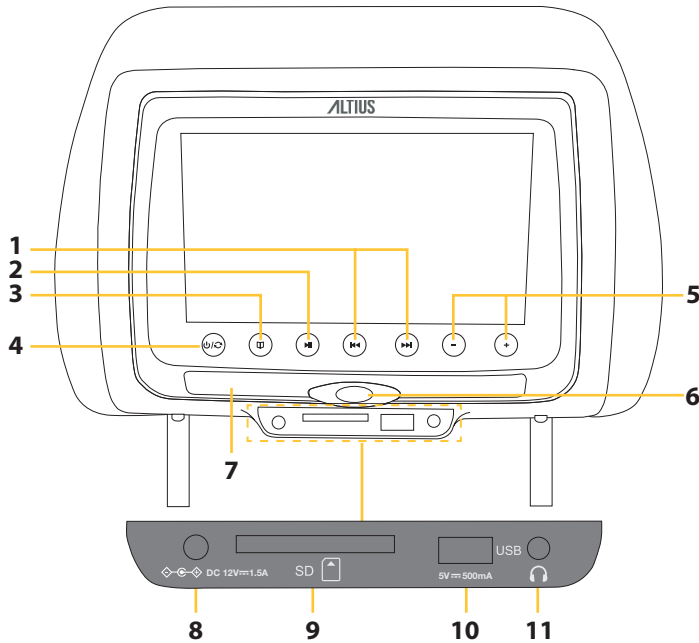 

1. : Move to the previous/next chapter or track.
2. : Press to play or pause. Press and hold to return.
3. : Press to go into the quick screen setting menu. Press and hold to enter the system settings menu. In menus, , , and work as navigation keys.
4. : Press to turn on the unit when the unit is off. Press and hold to turn off the unit when the unit is on. Press to switch between AV and DVD mode.
5. : Press to increase or decrease the audio volume.
6. DVD Tray Open/Close Button : Press to open the DVD disc compartment.
7. Remote Sensor
8. DC Power Input : You can connect the supplied car adaptor to this socket and the car's cigarette lighter socket.
9. SD Card Slot : Insert a SD card for media playback.
10. USB Port : Insert a USB for media playback.
11. Headphones Port : Connect to your earphones (included).


## INSTALLATION

There are two ways to install this headrest in your vehicle: you can do it yourself, or you have it professionally installed by an auto specialist.

**NOTE:** The shape and the size of the headrest may not be suitable in all cars. Please check the dimensions before installing.


### Install it yourself

1. Remove the original headrest of your car.
2. From the 6 pairs of installation tubes (16/14/13.8/12.7/12.5/12 mm in diameter) included in the product, select the correct pair for the poles of your car's headrest.
3. Adjust the space between the two poles of the headrest, and install the headrest in position and adjust its height as required.
4. Run the radio antenna and AV cable through the seat's pole.
5. Insert the car power adaptor into the car lighter port of your car.
6. Connect the DC connector of the car power adaptor (included) into the DC in port of the headrest DVD player.

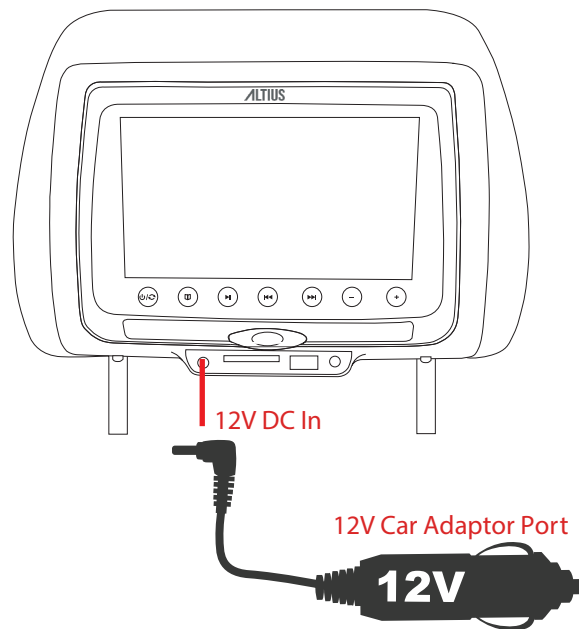

## Professional installation (auto specialist only)

1. Remove the original headrest.
2. From the 6 pairs of installation tubes (16/14/13.8/12.7/12.5/12 mm in diameter) included in the product, select the correct pair for the poles of your car's headrest.
3. Adjust the space between the two poles of the headrest and install the headrest into position. Adjust its height as required.
4. Run the radio antenna and AV cable through the seat's pole, then connect the AV cable bundle (included) to the car's AV system (see diagram below).
5. Connect the DC connector of the car power adaptor (included) into the DC In port of the headrest DVD player.

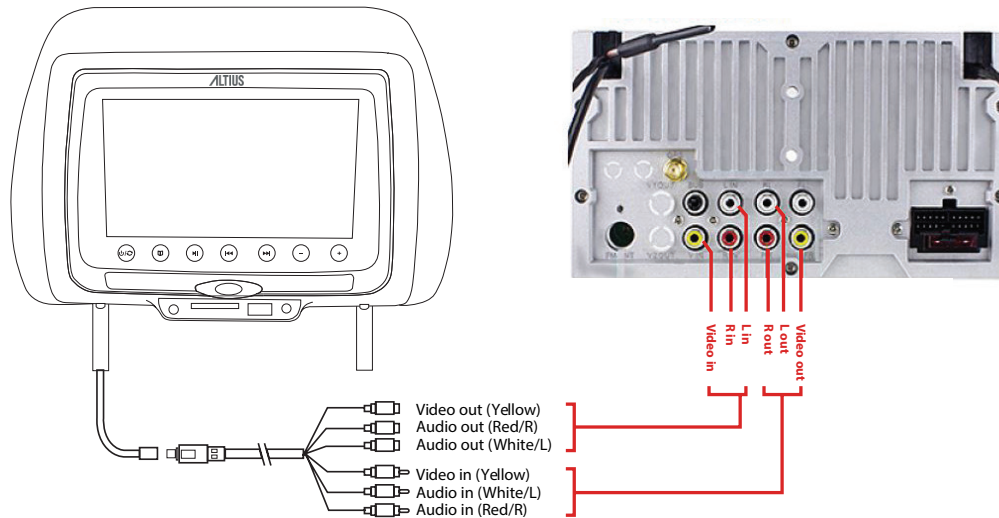

## PLACEMENT AND POSITION

A head restraint is designed to limit the movement of the head and provide support in an accident. A properly adjusted head restraint will help to protect you against whiplash, and potentially save you from a long-term injury.

### How to adjust your head restraint

**Picture 1:** This picture shows a well-adjusted head restraint, which will reduce the risk of suffering a whiplash injury. The seat back angle is relatively upright, and this allows the head restraint to be positioned close to the back of the head. The top of the head restraint is level with the top of the occupant's head, which will also help to prevent injury.

**Picture 2:** This picture shows a poorly adjusted head restraint. Even though the top of the head restraint is level with the top of the occupant's head, a large gap exists between the back of the occupant's head and the head restraint. This gap – which is marked in the picture – means that the head can move and tilt further back, increasing the risk of injury.



Picture 1: A well adjusted head restraint



Picture 2: A poorly adjusted head restraint



**Picture 3:** This picture shows another example of a properly adjusted head restraint. As in Picture 1, the two main points to note are that the head restraint is as high as the top of the occupant's head, and the restraint is close to the back of the head.

**Picture 4:** This picture is an example of a poorly adjusted head restraint. The picture shows the distance between the top of the occupant's head and the top of the head restraint, which would increase the risk of an injury. The head restraint should be moved higher, as shown in picture 3.



Picture 3: A well adjusted head restraint



Picture 4: A poorly adjusted head restraint

Credit: ROSPA, Road Safety Factsheet: Head Restraints



# REMOTE CONTROL

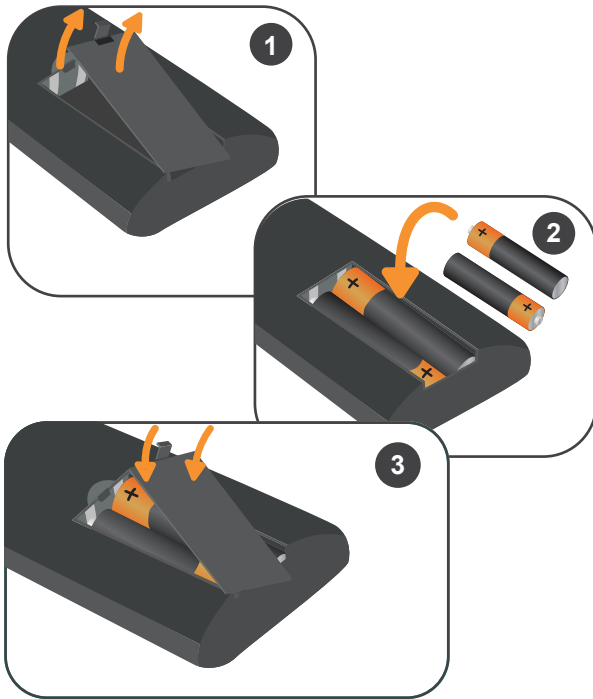


Illustration is for reference only and may not match the actual remote of the product.

## SETUP

Insert two AAA size batteries (not included) according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.




## PRECAUTIONS WHEN USING BATTERIES

- Do not use old and new batteries together.
- Do not use different types of batteries (e.g. Manganese and Alkaline batteries) together.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow any guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.
- Never throw batteries into a fire or expose them to extreme heat.

## USING THE REMOTE CONTROL

To use the remote, point it towards the remote sensor at the front of the headrest.

The remote has a range of up to about 3 metres from the headrest at an angle of up to 30 degrees to either side of the sensor, as illustrated below.

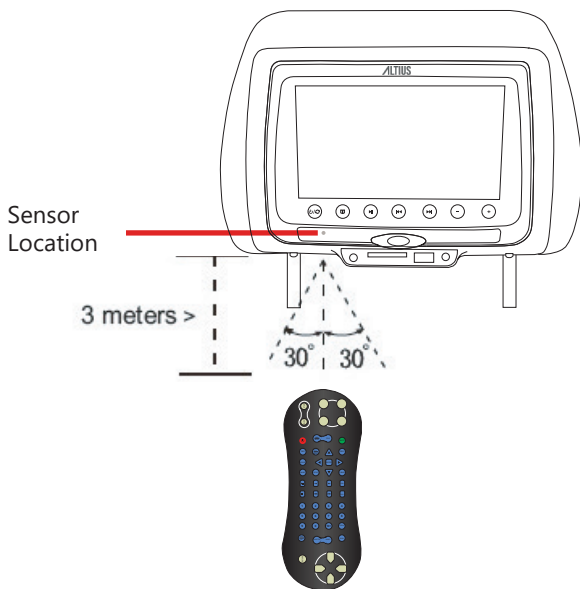

## REMOTE HINTS AND TIPS

- Point the remote control directly towards the sensor.
- Make sure no obstacles are blocking its path. The remote control will not operate if its path is blocked.
- Handle the remote control with care. Do not drop, apply shock or step on the remote control. Do not spill water on the unit.
- If you do not intend to use the remote control for an extended period of time (more than a month), remove the battery to prevent possible damage from battery leakage and corrosion.

## GAME PLAY BUTTONS

**Power** : Turn the unit on/off

**PBC/MENU** : Set PBC menu function on/off/select panel setting

**DISP** : Display the DVD playback information

**TFT/MENU** : Display the screen setting menu

**REPEAT** : Switch between repeat one/repeat all/repeat off

**ANGLE** : Change the angle of the camera on DVD mode

**SETUP** : Display the system setup menu

**Play/Pause** : Play/pause playback

**Rewind** : Rewind

**Stop** : Stop playback

**Previous** : Skip to the previous title/chapter/track

**DVD/AV** : Select the playback source

**SUBTITLE** : Select the subtitle

**TITLE** : Go to the title menu

**MUTE** : Mute sound

**PROG** : Program a playlist with track numbers

**Navigation** : Navigate the system menu

**ENTER** : Confirm a selection

**USB/SD** : Select between DVD/SD card/USB

**VOL+ / VOL-** : Increase/decrease volume

**Fast Forward** : Fast forward

**Next** : Skip to the next title/chapter/track


**NUMBER BUTTONS** : Numerical input to directly access a specific chapter or track

**ZOOM** : Zoom in on screen in AV mode

**SLOW** : Play in slow motion

**AUDIO** : DVD mode: select multi language sound. CD/VCD/SD Card/USB: Select audio channel

**GAME PLAY BUTTONS**

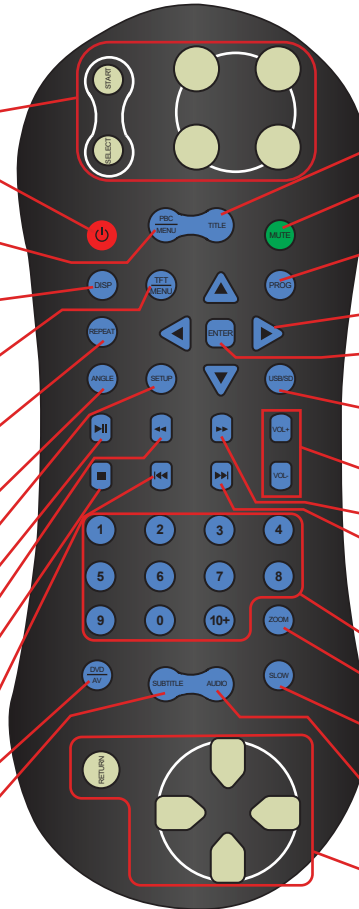

# OPERATION

## Power ON/OFF

- Press the POWER button on the remote control or the unit to turn it on.
- Press the POWER button on the remote (or press and hold the power button on the unit) again to turn the unit off.

## Loading a disc

1. Press the DVD/AV button or the USB/SD button to select the DVD mode.
2. Press and hold the OPEN button on the unit and lift up the screen frame.
3. Place a disc on the tray securely with the printed side outward.
4. Close the screen frame and playback will start automatically.

## Playing a disc

- When a disc is inserted, the playback starts automatically.
- Use the ►|| button, the ■ button, and the ►► and ◀◀ buttons to control the playback.
- Use the VOL+/VOL- buttons to control the audio volume.  
NOTE: If the FM or IR function is turned on in the audio settings menu, the volume control will be disabled; turn off the FM and IR function.
- Use the number pad to move to the numbered chapter or track.
- When playing a VCD 2.0 version, press the PBC button to use PBC function of the VCD.




### HANDLING DISCS

- In order to keep discs clean, hold the edge or the hole of a disc. Do not touch the surface.
- Do not place plaster, tape or any material on the surface of a disc.
- Keep discs away from direct sunlight or heat source.
- If a disc is dirty, clean it with a soft cloth before using it.
- Do not use chemical detergent to clean discs.

## PLAYING CONTENT FROM A USB/SD CARD

- 1) Insert a USB memory stick or SD card into the corresponding port on the unit.
- 2) The USB/SD memory is detected and the USB playback mode starts automatically. If it does not go to USB playback mode automatically, press the USB/SD button and select DVD/SD/USB using the navigation buttons and press ENTER to switch to USB/SD mode.
- 3) Select the file you wish to play using the navigation buttons on the remote control and press ENTER to confirm.
- 4) When viewing a JPEG image, the navigation buttons can be used to rotate the image.  
To go to the media selection menu, press stop twice.

 Note: This USB port is for PLAYBACK ONLY. Attempts to charge smart devices (e.g. phones, tablets) via this port could damage them.

## SYSTEM MENU

Press the SETUP button to display the system menu. Use the navigation buttons and the ENTER button to select items in the menu and change the settings.

### System Setup

TV system: Select the TV system. AUTO is recommended.

Last memory: Turn ON or OFF the Power Resume function.

TV Type: TV type to change the screen ratio between 4:3 PS, 4:3 LB and 16:9.

Password: Set the password for Rating. You can use the password "4711" to unlock if you forget your password. You can change the password after the lock icon appears as an open lock. When the icon is an open lock, enter a 4-digit password and press ENTER to confirm the change.

Rating: Set the playable DVD rating (only available when the password is unlocked).

Default: Press the **▶||** and ENTER buttons to restore to factory default settings.



### Language Setup

OSD language: Change the OSD language.

Audio language: Change the default Audio language.

Subtitle language: Change the default subtitle language.

Menu language: Change the menu language.

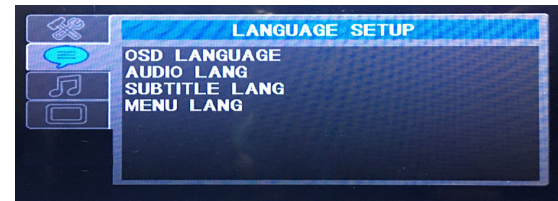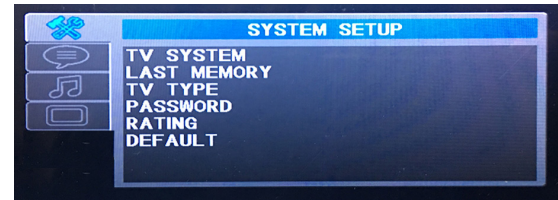

## Audio Setup


Key: Change sound pitch.

FM: Send the sound to your car FM radio via FM transmitter settings.

IR: Transmit the sound to IR earphones.

Downmix: Set the 5.1 Channel DVD downmix to 2 channel sound output. You can select Stereo, LT/RT (left total/right total).

Note: When set to FM or IR, all the sound will transmit through FM or IR; the built-in speaker and headphone port will have no sound output.

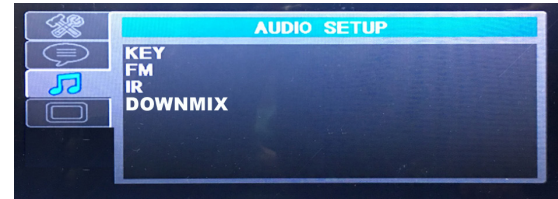

## Video Setup

Brightness: Change brightness of display.


Contrast: Change contrast of display.

Hue: Change hue of display.

Saturation: Change saturation of display.

Sharpness: Change sharpness of display.

Rotate: Flip the menu upside-down.

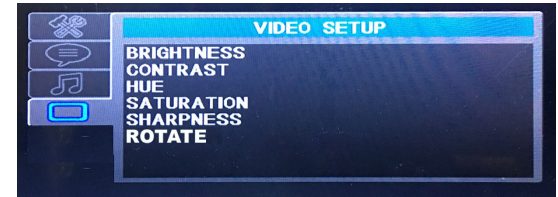

## Game function

You can play games on the entertainment system. You can download games from the internet (.nes format) and copy them onto an SD card or USB disk (not included).

- 1) Insert an SD card or USB with your games saved on it.
- 2) Playback starts automatically.
- 3) Use the game control pad on the remote to control the game play.
- 4) Press the RETURN button to go back to the menu.



# TROUBLESHOOTING

PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"><li>• Ensure connection to power is correct and secure.</li><li>• Position your car key in 'ACC' to supply power.</li></ul>
No sound	<ul style="list-style-type: none"><li>• Make sure the audio is not muted.</li><li>• Check the the volume level is not set too low.</li><li>• In the setup menu, make sure that FM mode and IR mode are set to off.</li></ul>
No image	<ul style="list-style-type: none"><li>• Select the correct mode (DVD/AV/USB/SD).</li><li>• Adjust the brightness and contrast in the menu.</li><li>• Some high resolution jpg format images may not be supported.</li></ul>
'No disc' error message	<ul style="list-style-type: none"><li>• Make sure you load the disc with its printed side facing outwards.</li><li>• Check the disc for damage or scratches.</li><li>• Check the region code and the format.</li></ul>
Screen size is wrong	<ul style="list-style-type: none"><li>• Set the TV system correctly in the menu.</li></ul>
File can't be played	<ul style="list-style-type: none"><li>• Check whether the file format is supported.</li><li>• Also, even if supported, files with high resolution or high bit rates may not be playable by this unit.</li></ul>
Remote control not working	<ul style="list-style-type: none"><li>• Remove any object between the remote control and the sensor on the unit.</li><li>• Aim the remote directly at the sensor on the unit.</li><li>• Make sure the batteries are installed correctly.</li><li>• Try replacing the batteries with new ones.</li></ul>
System has frozen	<ul style="list-style-type: none"><li>• Disconnect from power and re-start the unit.</li></ul>



## SPECIFICATIONS

Compatible Formats	DVD / SVCD / VCD / Game CD / JPEG / CD-R / CD-RW
Display	7" (diagonal) colour LCD
Output Ports	RCA Audio and Video Out (cable) 3.5mm Headphone Out
Inputs	USB port, SD/card slot, AV In (from internal cable)
Video System	Auto / PAL / NTSC
USB/SD Card	Max 32GB, FAT32 format
Power Supply	DC 12V, 1.5A
USB Output	DC 5V, 500mA
Product Weight	1.2kg
Product Dimensions	280 (L) x 150 (W) x 200 (H) mm (without poles)
Pole Height	150mm



Compatible with all DVD regions in PAL or NTSC format

For Technical and Warranty Support

1300 886 649

[www.tempo.org](http://www.tempo.org)

[info@tempo.org](mailto:info@tempo.org)

Distributed by Tempo (Aust) Pty Ltd,  
PO Box 6056, Frenchs Forest DC 2086

## COMPLIANCE AND RESPONSIBLE DISPOSAL



### Packaging

The packaging of your product has been selected from environmentally friendly materials and can usually be recycled. Please ensure these are disposed of correctly. Plastic wrapping can be a suffocation hazard for babies and young children, please ensure all packaging materials are out of reach and are safely disposed of. Please recycle these materials rather than throwing them away.

### Product

At the end of its working life, do not throw this product out with your household rubbish. An environmentally friendly method of disposal will ensure that valuable raw materials can be recycled. Electrical and electronic items contain materials and substances which, if handled or disposed of incorrectly, could potentially be hazardous to the environment and human health.

### Compliance

This product complies with the Australian Safety Standard AS/NZS 62368.1 to ensure the safety of the product.



# ALTIUS

**CUSTOMER HELPLINE AU:  
1300 886 649**

**DISTRIBUTED BY:  
TEMPO (AUST) PTY LTD,  
PO BOX 6056,  
FRENCHS FOREST  
DC 2086**