

ToolPRO

3 YEAR
WARRANTY



18V

GREASE GUN

PLU: 682094



CONTENTS

Safety Information.....	3
In The Box.....	9
Operating Instructions.....	10
Troubleshooting.....	18
Maintenance.....	18
Technical Data.....	19
Warranty.....	20

SAFETY INFORMATION

WARNING SYMBOLS:



To reduce the risk of injury, user must read instruction manual.



Wear ear protection.



Wear eye protection.



Wear dust mask.



Wear protective gloves.



Warning.



Indoor use only.



Read the operator's manual.



Double insulation.



Batteries may enter water cycle if disposed improperly, which can be hazardous for ecosystem. Do not dispose of waste batteries as unsorted municipal waste.



Do not burn.



Li-ion battery. This product has been marked with a symbol relating to 'separate collection' for all battery packs and battery pack. It will then be recycled or dismantled in order to reduce the impact on the environment. Battery packs can be hazardous for the environment and for human health since they contain hazardous substances.



Fuse (T 2A for 2A charger; T 3.15A for 4A charger; T 6.3A for 6A charger).



Positive terminal.



Negative terminal.



RCM marking.

ABN: Australian Business Number. By this number, business information such as entity type, status, business location etc. can be found at website <http://abr.business.gov.au>. ABN of Positec Australia Pty Limited is 14 101 682 357.



Use with model ACG1820D1, ACG1860D, ACG1840D2 battery charger. See instruction manual for additional battery chargers.

PRODUCT SAFETY

GENERAL POWER TOOL SAFETY WARNINGS

 **WARNING!** Read all safety warnings, instructions, illustrations and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.

Save all warnings and instructions for future reference.

The term “power tool” in the warnings refers to your mains-operated (corded) power tool or battery-operated (cordless) power tool.

1) Work area safety

- a) Keep work area clean and well lit. *Cluttered or dark areas invite accidents.*
- b) Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. *Power tools create sparks which may ignite the dust or fumes.*
- c) Keep children and bystanders away while operating a power tool. *Distractions can cause you to lose control.*

2) Electrical safety

- a) Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. *Unmodified plugs and matching outlets will reduce risk of electric shock.*
- b) Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. *There is an increased risk of electric shock if your body is earthed or grounded.*
- c) Do not expose power tools to rain or wet conditions. *Water entering a power tool will increase the risk of electric shock.*
- d) Do not abuse the cord. Never use the cord for carrying, pulling or unplugging the power tool. Keep cord away from heat, oil, sharp edges or moving parts. *Damaged or entangled cords increase the risk of electric shock.*
- e) When operating a power tool outdoors, use an extension cord suitable for outdoor use. *Use of a cord suitable for outdoor use reduces the risk of electric shock.*
- f) If operating a power tool in a damp location is unavoidable, use a residual current device (RCD) protected supply. *Use of an RCD reduces the risk of electric shock.*

3) Personal safety

- a) Stay alert, watch what you are doing and use common sense when operating a power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. *A moment of inattention while operating power tools may result in serious personal injury.*
- b) Use personal protective equipment. Always wear eye protection. *Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.*
- c) Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. *Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.*

- d) **Remove any adjusting key or wrench before turning the power tool on.** *A wrench or a key left attached to a rotating part of the power tool may result in personal injury.*
- e) **Do not overreach. Keep proper footing and balance at all times.** *This enables better control of the power tool in unexpected situations.*
- f) **Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts.** *Loose clothes, jewellery or long hair can be caught in moving parts.*
- g) **If devices are provided for the connection of dust extraction and collection facilities, ensure these are connected and properly used.** *Use of dust collection can reduce dust-related hazards.*
- h) **Do not let familiarity gained from frequent use of tools allow you to become complacent and ignore tool safety principles.** *A careless action can cause severe injury within a fraction of a second.*

4) Power tool use and care

- a) **Do not force the power tool. Use the correct power tool for your application.** *The correct power tool will do the job better and safer at the rate for which it was designed.*
- b) **Do not use the power tool if the switch does not turn it on and off.** *Any power tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) **Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools.** *Such preventive safety measures reduce the risk of starting the power tool accidentally.*
- d) **Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool.** *Power tools are dangerous in the hands of untrained users.*
- e) **Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If damaged, have the power tool repaired before use.** *Many accidents are caused by poorly maintained power tools.*
- f) **Keep cutting tools sharp and clean.** *Properly maintained cutting tools with sharp cutting edges are less likely to bind and are easier to control.*
- g) **Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed.** *Use of the power tool for operations different from those intended could result in a hazardous situation.*
- h) **Keep handles and grasping surfaces dry, clean and free from oil and grease.** *Slippery handles and grasping surfaces do not allow for safe handling and control of the tool in unexpected situations.*

5) Battery tool use and care

- a) **Recharge only with the charger specified by the manufacturer.** *A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.*
- b) **Use power tools only with specifically designated battery packs.** *Use of any other battery packs may create a risk of injury and fire.*
- c) **When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.** *Shorting the battery terminals together may cause burns or a fire.*
- d) **Under abusive conditions, liquid may be ejected from the battery; avoid contact.** *If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.*
- e) **Do not use a battery pack or tool that is damaged or modified.** *Damaged or modified batteries*

may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.

- f) **Do not expose a battery pack or tool to fire or excessive temperature.** *Exposure to fire or temperature above 130 °C may cause explosion.*
 - g) **Follow all charging instructions and do not charge the battery pack or tool outside the temperature range specified in the instructions.** *Charging improperly or at temperatures outside the specified range may damage the battery and increase the risk of fire.*
- 6) **Service**
- a) **Have your power tool serviced by a qualified repair person using only identical replacement parts.** *This will ensure that the safety of the power tool is maintained.*
 - b) **Never service damaged battery packs.** *Service of battery packs should only be performed by the manufacturer or authorized service providers.*

ADDITIONAL SAFETY RULES FOR GREASE GUNS

1. Parts of the tool or the hose assembly can break or crack due to high pressure. Risk of serious injury may occur. Always inspect tools and hose assemblies for damage or wear before use. Never use if any part of the tool is damaged or worn.
2. Use only flexible hoses recommended by the manufacturer. Hold the hose only by the flexible hose safety spring guard to avoid serious personal injury.
3. If the hose becomes kinked or damaged, it may rupture, resulting in serious injury. Replace hoses at the first sign of wear, kinking, or damage.
4. **WARNING:** Risk of injection or serious injury. A broken component can inject grease into the skin or eyes, causing serious injury or infection. Don't treat of it as a simple cut and seek medical advice immediately.
5. **WARNING:** Always use safety glasses. Everyday glasses are not safety glasses. If the operation is dusty, a face shield or dust mask should also be used. Always wear proper personal hearing protection during use. Under certain conditions and duration of use, the noise produced by this product may cause hearing loss.
6. Use only grease recommended in this manual. See the technical information sheet under Using a Grease Gun.
7. **WARNING:** Risk of fire, and grease may be flammable. Do not expose to fire or heat. Read and follow all warnings and instructions from the lubricant manufacturer.
8. To reduce the risk of serious personal injury, do not use the grease gun around or on moving parts, mechanisms or running equipment.
9. Ventilation openings often cover moving parts and should be avoided. Loose clothing, jewelry, or long hair can get caught on moving parts.
10. **WARNING:** The grease gun may generate high pressures up to 10000 psi (690 bar) . Always wear gloves when operating. Keep hands away from exposed rubber parts of the hose.
11. **WARNING:** The output may be under high pressure. Do not discharge directly to yourself, other peoples or pets.
12. When not in use, place the tool on its side on a stable surface to avoid tripping or falling hazards. Some tools with large battery packs can stand upright on the battery pack, but may be easily knocked over.
13. When not use for a long time, remove the battery pack from the machine before storing.

SAFETY WARNINGS FOR BATTERY PACK

- a) Do not dismantle, open or shred cells or battery pack.
- b) Do not short-circuit a battery pack. Do not store battery packs haphazardly in a box or drawer where they may short-circuit each other or be short-circuited by conductive materials. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- c) Do not expose battery pack to heat or fire. Avoid storage in direct sunlight.
- d) Do not subject battery pack to mechanical shock.
- e) In the event the battery leaks and contents makes contact with skin or eyes, flush immediately with running water. Flush eyes by holding eyelids apart and flush the eye continuously with running water. Continue flushing until advised to stop by a Poisons Information Centre (e.g. phone Australia 13 11 26; New Zealand 0800 764 766) or a doctor, or for at least 15 minutes. If pain returns or you experience an adverse reaction contact the Poisons Information Centre (e.g. phone Australia 13 11 26; New Zealand 0800 764 766) or a doctor without delay.
- f) Keep battery pack clean and dry.
- g) Wipe the battery pack terminals with a clean dry cloth if they become dirty.
- h) Battery pack needs to be charged before use. Always refer to this instruction and use the correct charging procedure.
- i) Do not maintain battery pack on charge when not in use.
- j) After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.
- k) Recharge only with the charger specified by manufacturer. Do not use any charger other than that specifically provided for use with the equipment.
- l) Do not use any battery pack which is not designed for use with the equipment.
- m) Keep battery pack out of the reach of children.
- n) Retain the original product literature for future reference.
- o) Remove the battery from the equipment when not in use.
- p) Dispose of properly.
- q) Do not mix cells of different manufacture, capacity, size or type within a device.
- r) Keep the battery away from microwaves and high pressure.
- s) Warning! Do not use non-rechargeable batteries.
- t) If the battery gets hot, smokes, or swells. Immediately stop using the item and remove the battery pack from the charger or tool. Contact your retailer for further advice.

GENERAL SAFETY WARNINGS

 **WARNING!** Read all safety warnings and all instructions. *Failure to follow all instructions listed below may result in electric shock, fire and/or serious injury.*

Save all warnings and instructions for future reference.


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Additional safety instructions for your Battery Charger

1. Before charging, read the instructions.
2. For charge ToolPRO ABP1820HD1 ABP1840TD1 ABP1850TD battery pack only.
3. Do not charge a leaking battery.
4. Do not use chargers for works other than those for which they are designed.
5. Before charging, ensure your charger is matching the local AC supply.
6. The charging device must be protected from moisture.
7. Do not use the charging device outdoors.
8. Do not short out the contacts of battery or charger.
9. Respect the polarity “+/-“ when charging.
10. Do not open the unit and keep it out of the reach of children.
11. Do not charge the batteries of other manufactures or ill-suited models.
12. Ensure that the connection between the battery charger and battery is correctly positioned and is not obstructed by foreign bodies.
13. Keep battery charger's slots free of foreign objects and protect against dirt and humidity. Store in a dry and frost-free place.
14. When charging batteries, ensure that the battery charger is in a well-ventilated area and away from inflammable materials. Batteries can get hot during charging. Do not overcharge any batteries. Ensure that batteries and chargers are not left unsupervised during charging.
15. Do not recharge non-rechargeable batteries, as they can overheat and break.
16. Longer life and better performance can be obtained if the battery pack is charged when the air temperature is between 18°C and 24°C. Do not charge the battery pack in air temperatures below 0°C, or above 40°C. This is important as it can prevent serious damage to the battery pack.
17. Charge only battery pack of the same model provided by manufacturer and of models recommended by manufacturer.
18. Do not expose the appliance or battery to excessive temperatures.
19. Rechargeable batteries are to be removed from the appliance before being charge.
20. Different types of batteries or new and used batteries are not to be mixed.
21. Exhausted batteries are to be removed from the appliance and safely disposed of.
22. If the appliance is to be stored unused for a long period, the batteries should be removed.
23. Do not use non-rechargeable batteries in place of rechargeable batteries.
24. Do not use modified or damaged batteries.

IN THE BOX

- ① Lamp Button
- ② Lock On/Off Button
- ③ Continuous-operating Button
- ④ Main Handle
- ⑤ Battery Pack Release Button
- ⑥ Battery Pack (Sold Separately)
- ⑦ Barrel
- ⑧ Rod Handle
- ⑨ Flexible Hose
- ⑩ Filler Port Plug
- ⑪ Air Drain
- ⑫ Hose Holder
- ⑬ Speed Control Switch
- ⑭ On/Off Button
- ⑮ Counter Dial Knob
- ⑯ LED Lamp
- ⑰ Strap Eyelet (X2)

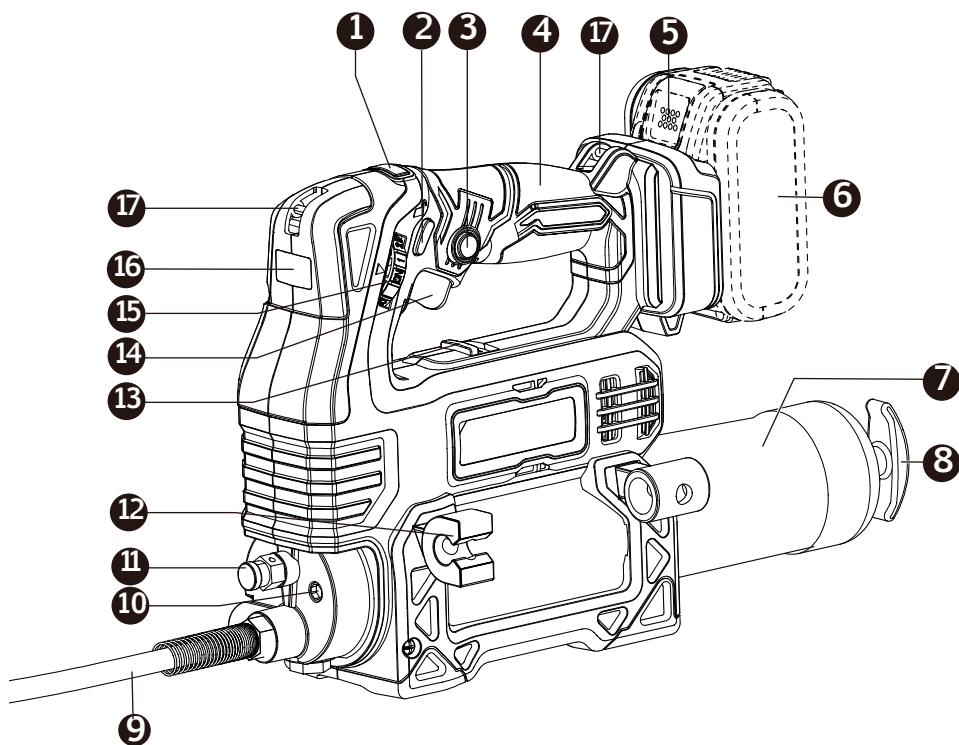

OPERATING INSTRUCTIONS



NOTE: Before using the tool, read the instruction book carefully.

1) CHARGING

We strongly recommend to use ToolPRO battery & charger kit. Please contact you local Supercheap Auto store for more details or log onto www.supercheapauto.com.au for Australia or www.supercheapauto.co.nz for New Zealand customers to find out more details.

BEFORE PUTTING INTO OPERATION

CHARGING THE BATTERY PACK (NOT SUPPLIED) (SEE FIG. A1-A3)

- Do not use any charger other than that specifically provided for use with the equipment.
- If the battery pack is very hot, you must remove your battery pack from the charger and allow time for the battery to cool down before recharging.
- Please charge the battery to reach full before storage. If the tool will not be used for long periods of time, charge the battery every 3 months.
- Do not leave batteries on charger for long periods of time once fully charged.

CHARGING PROCEDURE

- Plug the charger into an appropriate outlet.
- Place the battery pack into the charger.
- When charging is completed, unplug the charger and remove the battery pack.

NOTE: If the battery pack is locked in the charger, press the battery pack release button and remove it.



WARNING: When battery charge runs out after continuous use or exposure to direct sunlight or heat, allow time for the battery to cool down before re-charging to achieve the full charge.

CHARGING INDICATOR


2.0A charger-ACG1820D1 (not supplied) (See fig. A1)

Light	ON/OFF flash	Status
Red on 		Charging
Red flash 	- - - - -	Defective Battery
Green on 		Fully Charged
Green flash 	- - - - -	Hot/Cold Delay

4.0A charger-ACG1840D2 (not supplied) (See fig. A2)


6.0A charger-ACG1860D (not supplied) (See fig. A3)

Light	ON/OFF flash	Status
Red on 		Defective Battery
Red flash 	- - - - -	Hot/Cold Delay
Green on 		Fully Charged
Green flash 	- - - - -	Charging

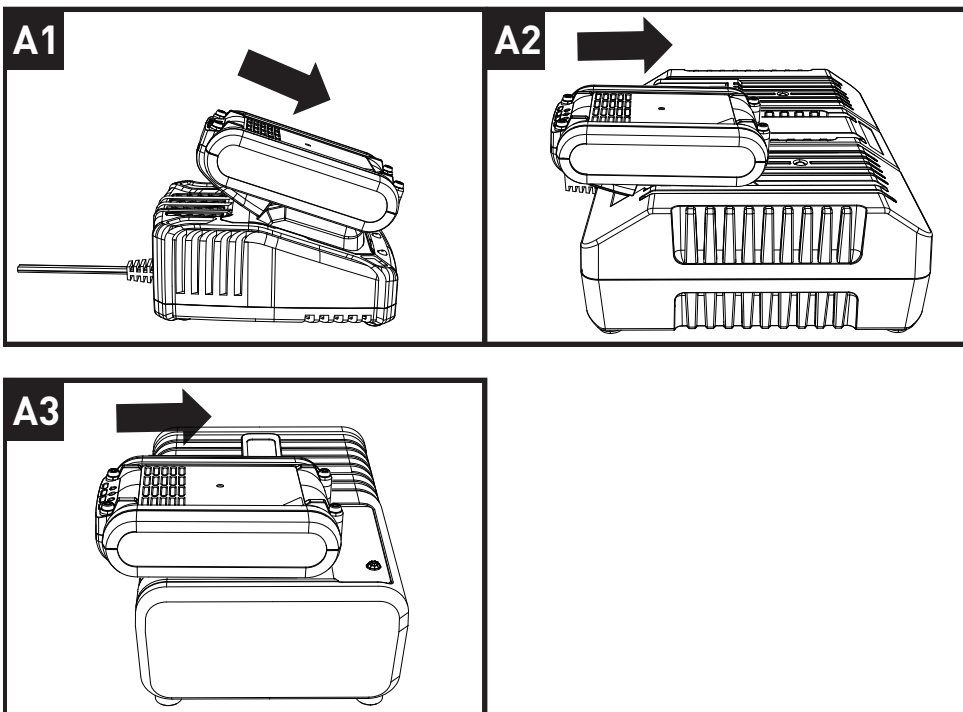

2) INSTALL AND REMOVE THE BATTERY PACK (NOT SUPPLIED) (SEE FIG. B)

Slide the fully charged battery pack onto the tool with sufficient force until it clicks into position. Depress the battery pack release button firmly first and then slide the battery pack out from your tool.

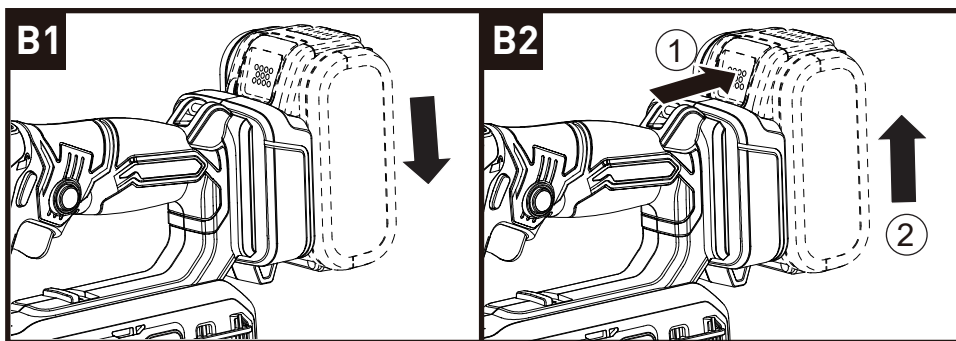


ASSEMBLY AND ADJUSTMENT

1. REMOVING OR INSTALLING BARREL (SEE FIG. C1, C2)

To remove the barrel, rotate it as illustrated.

To install the barrel, insert it into the tool then rotate in reverse.

⚠ CAUTION: Always be sure that the tool is switched off and the battery cartridge is removed before carrying out any work on the tool.

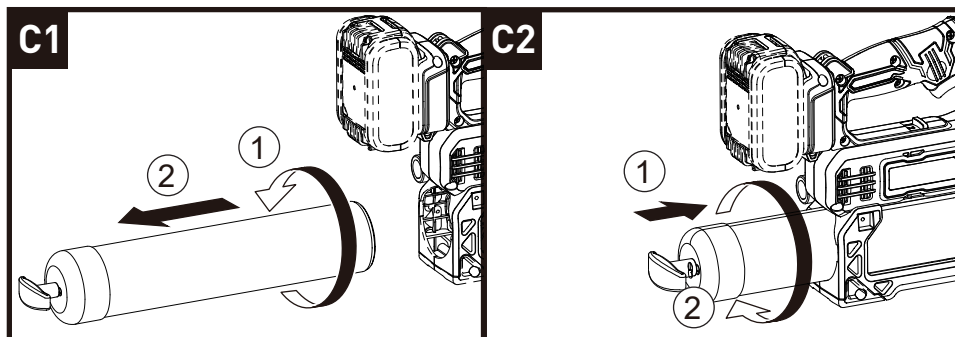


2. ROD HANDLE (SEE FIG. D1, D2)

Pull back the rod handle when installing grease in the barrel.

To lock the rod handle fully pulled, pull the rod handle until the groove on the rod can be seen, and then hook the groove onto the slot. To unlock the rod handle, unhook the groove so the rod moves forward.

NOTE: If there is still grease in the barrel when you stop using the tool, you need to remove the barrel from the tool. Loosen the valve of the air drain to let air comes into the barrel at first, then remove the barrel.

⚠ CAUTION: Make sure the rod handle is locked firmly. Otherwise it may be unlocked accidentally and cause a pinching.

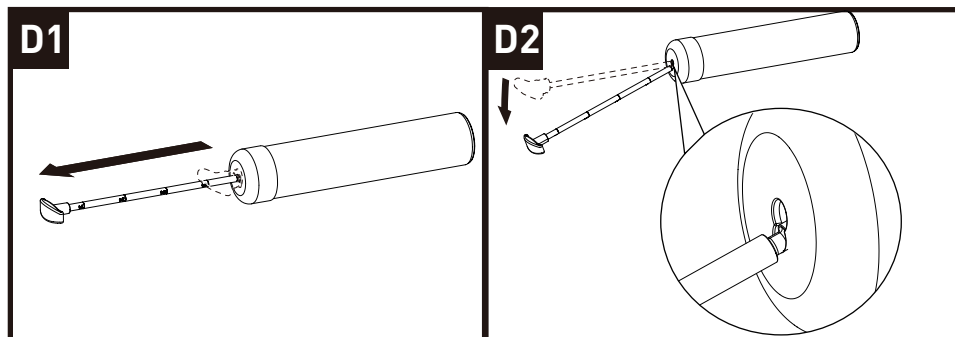



3. GREASE SUPPLY (NOT SUPPLIED)

⚠ WARNING: Make sure to read the instruction manuals of the grease and/or other instruments and replace the following contents as necessary. Misuse or failure to follow the instructions may damage the tool or cause an injury.

a) Installing grease cartridge (not supplied) in the barrel

- 1) Remove the barrel from the tool then fully pull the rod handle and lock it. (See Fig. E1)
- 2) Remove the plastic cap of the grease cartridge and insert the grease cartridge into the barrel. (See Fig. E2)
- 3) Remove the pull tab of the grease cartridge then install the barrel to the tool. Screw the barrel into the tool while pushing the barrel forward. (See Fig. E2)
- 4) Release the rod handle. (See Fig. E3)
- 5) Eject the air that remains in the flow path of the grease. (Refer to the section for ejection of air.)


NOTE: When using the barrel with the old grease remains, remove the barrel and purge the old grease according to the section for purge of grease.

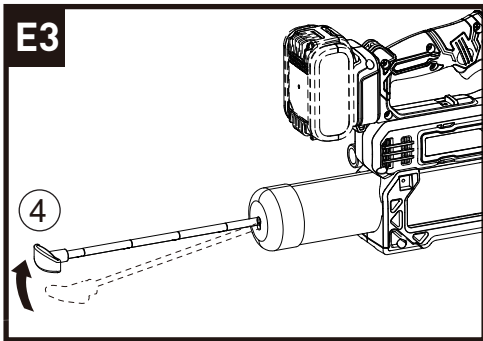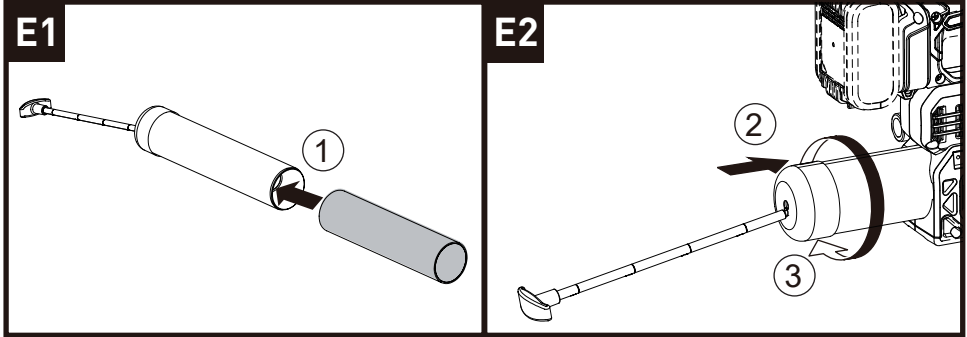

b) Filling grease in the barrel from a bulk container (not supplied)

- 1) Remove the barrel from the tool.
- 2) Dip the tip of the barrel in the grease and then pull the rod handle. The grease is pumped up into the barrel. (See Fig. F1)
- 3) Fully pull the rod handle and lock it. (See Fig. F2)
- 4) Install the barrel to the tool and then unlock the rod handle.
- 5) Eject the air that remains in the flow path of the grease. (Refer to the section for ejection of air.)

NOTE: When locking the rod handle, make sure the rod handle is locked firmly. Otherwise the rod handle get unlocked unintentionally, the grease comes out from the barrel.

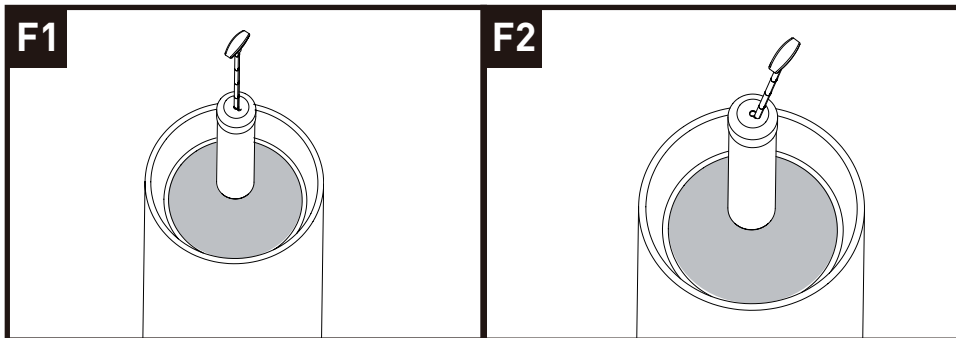

c) Filling grease trough filler port plug

- 1) Remove the cap of the filler port plug.
- 2) Fill grease into the filler port as needed.

4. EJECTION OF AIR (SEE FIG. G)

If air remains in the flow path of the grease, the tool cannot pour grease accurately. Eject the air before each use and also when the tool seems to work improperly due to air.

- 1) To eject air from inside of the tool, loosen the valve for air drain. Air comes out from the hole for air drain.
- 2) Fasten the valve when you see the grease coming out of the hole. If you cannot see the grease coming out from the hole, you can push or pull the rod handle to eject the air.




WARNING: Do not turn on the tool during ejecting the air.



WARNING: Wear the protective goggles when ejecting the air.




WARNING: Wipe off the grease that comes out from the air drain with a dry cloth or the like. Otherwise it may cause slipping and result in an injury.

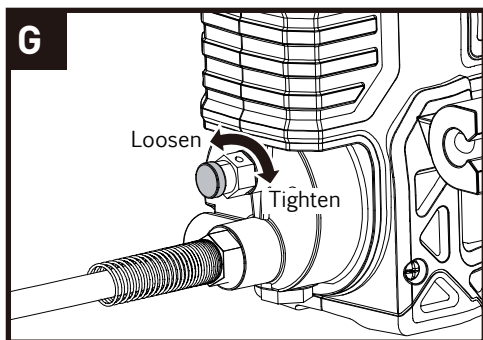

OPERATION

1. LED LAMP (SEE FIG. H)


Press the lamp button to light up the lamp. Press the lamp button again to turn off the lamp. When the tool is left without any operation for about 5 mins with the motor stopped, the lamp goes out.

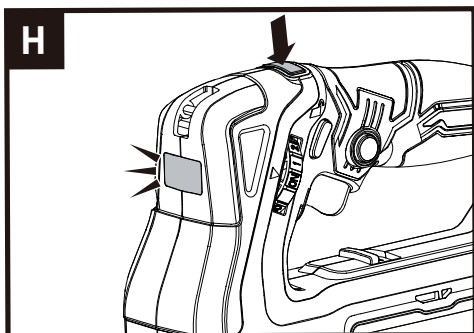

2. COUNTER DIAL (SEE FIG. I)


The counter dial can be set to limit the amount of grease dispensed. Set the dial to dispense grease as long as the trigger is pressed.

NOTE: The counter will be reset each time the trigger is pressed again.

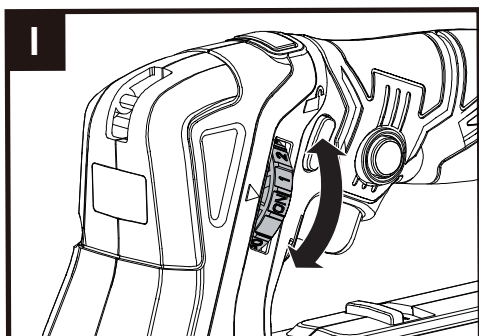

3. SPEED CONTROL (SEE FIG. J)

Push the speed control switch to display “1” for low flow rate, high pressure. Push the speed control switch to display “2” for high flow rate, low pressure.

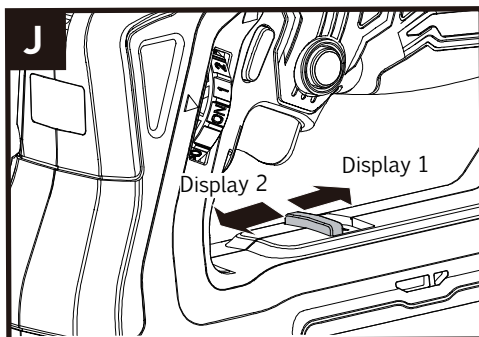


4. SWITCH ACTION (SEE FIG. K)

CAUTION: Before installing the battery pack into the tool, always check to see that the on/off button actuates properly and returns to the “OFF” position when released. To prevent the on/off button from accidentally pressed, the lock on/off button is provided.

To start the tool, depress the lock on/off button and then on/off button. Release the on/off button to stop (Step 1 and 2).

For continuous operation, press the lock on/off button, on/off button and then the continuous-operating button. To stop the tool from the locked position, press the on/off button again (Step 1, 2 and 3).

NOTE: Only press the lock on/off button in one direction as shown in figure below. Reverse operation can't release the on/off button.

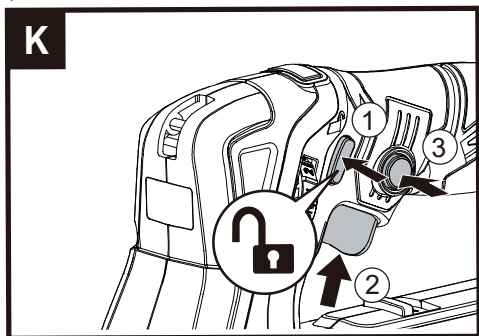

5. DISPENSING THE GREASE (SEE FIG. L)

In the following cases, purge the old grease inside the tool before use;

- When using the tool for the first time or;
- When using different type of the grease from previous use.

With the new grease filled in the barrel, run the tool for a while until the old grease is pushed out from the adapter.

NOTE: The tool has been tested at the factory and small amount of the grease remains. Perform the following procedure to dispense the grease.




CAUTION: Always check the speed mode before operation.

- 1) Depress the lock on/off button and the on/off button to dispense the grease.
- 2) If grease doesn't appear, repeat to eject the air.

NOTE: Do not leave the tool running even after the grease depleted. It may shorten the life of the tool.

NOTE: If the internal pressure rises, the protection system works and the motor will stop even though the tool does not reach the maximum operating pressure.

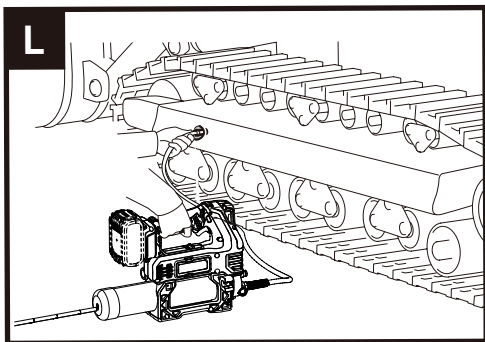


6. SHOULDER STRAP (NOT SUPPLIED) (SEE FIG. M)


⚠ WARNING: Never use the strap hole for lanyard (tether strap). Doing so may result in serious injury because the strap hole is not intended for a safety device for fall prevention.

⚠ WARNING: When carrying the tool, keep holding the tool even if when using the shoulder strap. Carrying the tool using only the shoulder strap makes it unstable. The shoulder strap may come off or the tool hit other objects and cause injury.

Attach the hooks of the shoulder strap onto the mounts of the strap eyelets as shown in the figure.

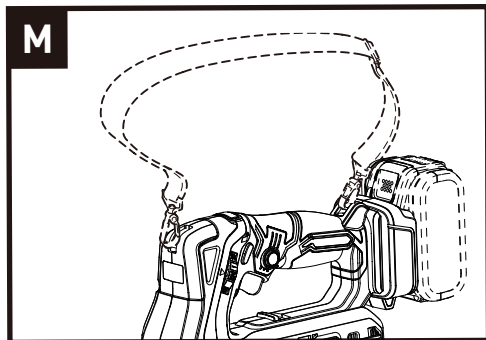**7. HOSE HOLDER (SEE FIG. N)**

After using the machine, the hose can be stored as the illustration.

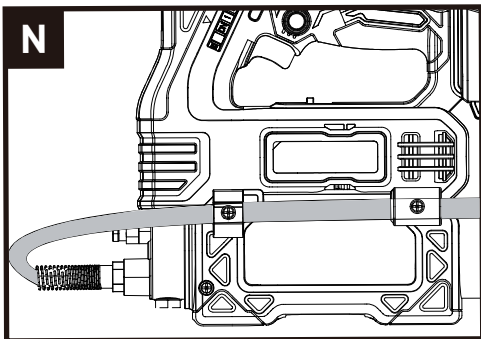

TROUBLESHOOTING

Unable to pull back rod handle.	Loosen the valve to release pressure.
Unable to push rod handle forward.	Rotate rod handle 90° to disengage it from slot.
No grease when on/off button is pulled.	Barrel is empty, add grease.
	Air pockets in the barrel. Push and pull the rod handle to eject the air.
	Contamination in grease barrel, Clearing contamination.
Grease gun stops pumping after one/several pump strokes.	Confirm that counter dial is set to "ON" position.

MAINTENANCE

Remove the battery pack from the tool before carrying out any adjustment, servicing or maintenance.

Your tool requires no additional lubrication or maintenance.

There are no user serviceable parts in your power tool. Never use water or chemical cleaners to clean your power tool. Wipe clean with a dry cloth. Always store your power tool in a dry place.

NOTE: Never use gasoline, benzine, thinner, alcohol or the like. Discoloration, deformation or cracks may result.

PURGE OF GREASE

When storing the tool or using the barrel in which the grease remains, remove the barrel and purge the old grease in the following procedure.

1. Loosen the valve for air drain.
2. Fully pull the rod handle and lock it.
3. Remove the barrel from the tool.
4. Unlock the rod handle. Keep holding the rod handle and slowly move the rod handle forward so the grease gets out of the barrel.

CAUTION: Do not take hand off from the rod handle. Otherwise the grease pops out vigorously.

NOTICE: Keep dust away from inside of the barrel. Dust may get clogged in the tool.

NOTICE: Clean the inside of the barrel once every three months.

FOR BATTERY TOOLS

The ambient temperature range for the use and storage of tool and battery is 0°C-45°C.

The recommended ambient temperature range for the charging system during charging is 0°C-40°C.

TECHNICAL DATA

Voltage		18V ---		
Grease capacity	Barrel	450g		
	Bulk	570g		
Flow Rate	Low	100g/min		
	High	300g/min		
Operating pressure		10000/6000 PSI		
Hose length		120 cm		
Grease type		Lithium base grease		
Machine Weight (Without Battery)		3.8 kg		
Charging Time		2.0Ah battery (ABP1820HD1)	4.0Ah battery (ABP1840TD1)	5.0Ah battery (ABP1850TD)
	2.0A charger (ACG1820D1)	70 min	140 min	170 min
	4.0A charger (ACG1840D2)	40 min (1 x battery)	80 min (1 x battery)	100 min (1 x battery)
		80 min (2 x batteries)	160 min (2 x batteries)	200 min (2 x batteries)
	6.0A charger (ACG1860D)	25 min	50 min	70 min
Charger Input		100-240V~50/60Hz		
Charger Output		20V --- 2.0A by 2.0A fast charger 20V --- 4.0A by 4.0A fast charger 14.4-20V --- 6.0A by 6.0A fast charger		
Battery Capacity		2.0/4.0/5.0Ah Li-ion battery		

WARRANTY

WARRANTY STATEMENT FOR ToolPRO

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Where a failure does not amount to a major failure, we are entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by us to comply with a consumer guarantee under the Australian Consumer Law. Such evidence may include photographs, statutory declarations, receipts or reports (e.g. from your doctor), depending on the loss or damage.

In addition to any rights and remedies you may have under the Australian Consumer Law and any other applicable law, if this product becomes defective due to faulty materials or workmanship within a period of 3 years from the date of purchase, we guarantee to:

- Replace or repair all defective parts, free of charge; or
- Repair products free of charge; or
- Replace the unit with a new or re-conditioned unit free of charge.

Your warranty is subject to the following conditions:

- Battery packs are guaranteed for a 12 month period only.
- This product has not been misused, abused, neglected, altered, modified or repaired by anyone other than an authorized service centre.
- Only genuine ToolPRO accessories and parts have been used on or with the product.
- This product has been subjected to fair wear and tear.
- This product has not been used for trade or professional purposes.
- This product has not been used for rental purposes.
- This product has not sustained damage through foreign objects, substances or accidents.

Your warranty does not cover:

- Components that are subject to natural wear and tear caused by use in accordance with operating instructions.
- Unauthorized/improper maintenance/handling or overload are excluded from this warranty as are accessories such as bulbs, blades and bits, etc.
- Accessories supplied with this product.

For claims under this ToolPRO warranty, please contact the ToolPRO Helpline. To make a claim you will need to provide proof of purchase in the form of a valid receipt that displays the date and place of purchase. Any expense you incur in claiming under the ToolPRO warranty will be borne by you.

ToolPRO Helpline 1300 889 028

This guarantee statement does not replace but is in addition to your statutory rights.

This warranty applies only to the original purchaser and may not be transferred.

All repairs and replacement products will be covered by the limited warranty of the balance of the warranty period from the date of the original purchase.

This ToolPRO warranty is provided by Positec Australia Pty Limited ACN 101 682 357 of 25 Research Drive, Croydon South VIC 3136

Return product to place of purchase.





PLU: 682094

CODE: CEG18DH.9

Manufactured and Packaged for
SRGS PTY. LTD.

ABN 23 113 230 050

6 Coulthards Avenue, Strathpine,
Queensland 4500, Australia.

MADE IN CHINA