





6V-3A / 12V-6A 7 STAGE BATTERY CHARGER INSTRUCTION MANUAL





TECHNICAL DATA

Model	HFGP06DVL	
Charger Type	7 Stage Intelligent Battery Charger	
Compatible Rechargeable Battery Types	6V and 12V Flooded Lead Acid, AGM, GEL, Maintenance Free, Calcium and LiFePO4 (6V 2 cells &12V 4 cells)	
Lithium Compatible	Yes, LiFePO4 batteries only	
AC Input Voltage (V)	220V-240V / 50-60Hz	
Maximum Input Power	103W	
Maximum Output Power	87.6W	
Maximum Output Current	6V 3A / 12V 6A	
Absorption/boost Output (V)	7.2V / 14.6V	
Float Output (V)	at Output (V) 6.6V / 13.4V	
Battery Type Selections	Manual and Automatic selection options	
Maximum Recommended Battery Charging Capacities	6V - 3A - max 30Ah / 250CCA	
	12V - 6A - max 65Ah / 550CCA	
Mayimum Decommonded Patters Maintenance Canaditics	6V - 70Ah / 400CCA	
Maximum Recommended Battery Maintenance Capacities	12V - 150Ah / 800CCA	
Minimum DC Start Charge (V)	Above 1V	
Ambient Working Temperature	-20°C to 50°C	
Case Type	Plastic	
Water Resistance	IP65	
240V Cable Length	1m	
12V Cable Length	0.5m	
Additional Lead Lengths (1 x alligator clips, 1 x ring terminals)	0.5m each	



SAFETY/WARNING

- Before using this SCA battery charger, ensure the instructions have been read and understood.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance, cleaning and user maintenance shall not be made by children without supervision.
- This SCA battery charger is designed to charge most 6 volt and 12 volt battery types including: Lead Acid, Deep Cycle, Calcium, Gel, Absorbed Glass Matt (AGM) batteries and LiFePO4 batteries, and flooded and maintenance free configurations.
- Always wear the appropriate Personal Protective Equipment (PPE) when working near batteries. This includes gloves and eye protection.
- Always ensure that there is no damage to the power source (240V power outlet). This includes cracks or exposed wires.
- When working with Lead Acid bateries remove all jewellery including watches and rings.
- Use insulated tools to ensure prevention of a battery short, should the metal tool make contact
 with the battery terminals.
- Ensure battery is charged in a well ventilated area. Explosive gases may escape from the battery during charging. Never charge a battery in a closed off space or in an area without ventilation.
- Never smoke, use an open flame or create sparks near a battery or charger whilst charging
 as gases may cause an explosion. Please keep lit cigarettes, flames or other ignition sources
 away from the charging battery at all times.
- This battery charger is IP65 dust & waterproof rated, however, it is advised to use indoors
 only and do not expose the charger to water or liquids.
- If the supply cord is damaged, it must be replaced by a service agent or similarly qualified person, in order to avoid a hazard.
- Do not disassemble the battery charger. The warranty will be void if this instruction is ignored.
- Ensure the battery charger is OFF before connecting and disconnecting from the battery.
 Once connected, power can be turned on.
- Ensure vehicles ignition is switched off before charging the battery.
- Do not place the battery charger where it is not able to get adequate ventilation. Do not place
 the battery charger on any painted panels on your vehicle, on fabric/leather/vinyl seats, on the
 battery, or balanced in the engine bay.
- This battery charger is not capable of charging frozen batteries or non-rechargeable, dry cell
 or lithium batteries (except LiFePO4 types).



FIRST AID

- For advice, contact the Poisons Information Centre in Australia (PH: 13 11 26) or the National Poisons Centre in New Zealand (PH: 0800 764 766)
- If battery acid makes contact with the skin or clothing, wash immediately with soap and water.
- If battery acid makes contact with the eyes, hold eyelids apart and flush the eye continuously
 with fresh running water for at least 15 minutes or until the Poisons information centre advises
 you to stop.
- If battery acid is swallowed, do not induce vomiting. Drink a glass of water and seek medical assistance.

FEATURES

- · 7 stage charging system
- Suitable for Gel, Lead Acid, AGM, Maintenance Free Calcium and Lithium LiFePO4 automotive battery types.
- LCD indicator shows charging status. Integrated battery test function notifies of battery fault or reverse polarity connections.
- Internal protection systems.
- Supplied with alligator clamps and ring terminals for fixed connections.
- Memory function memorizes the battery type status and applies this battery type as the default status for the next charge cycle.



7 STAGES OF CHARGING

This charger uses an automatic 7 stage charging process, designed to optimally charge and maintain batteries.

- Stage 1: Analysis & Desulphation pulsed current
- Stage 2: Soft Start constant current
- Stage 3: Bulk Charge high current
- Stage 4: Absorption constant voltage
- Stage 5: Rest & Diagnosis no current, voltage drop monitored
- Stage 6: Recondition pulsed current, float voltage
- Stage 7: Maintenance low current, float voltage



BATTERY PROTECTIONS

a. Reverse polarity protection

If the clamps are connected to the battery in reverse, the reverse polarity protection will engage. Refer to error code "Er1" in the TROUBLESHOOTING ERROR CODES section on page 11.

b. Short circuit protection

If the charger detects less than 1.0V across the clamps, the short circuit protection will engage and no power will be delivered to the cables. Refer to error code "Er1" in the TROUBLESHOOTING ERROR CODES section on page 11.

c. Over voltage protection

When the charger is set to charge in a different voltage than the detected voltage of the battery, this protection will engage. Refer to error code "Er1" in the TROUBLESHOOTING ERROR CODES section on page 11.

d. Overheat protection

The overheat protection mode will engage if the temperature of the charger's housing reaches 65°C. The charger will decrease the charging current and even shut itself off, if overheating is detected. Once the charger cools down to 60°C, charging will automatically resume. Refer to error code "Er3" in the TROUBLESHOOTING ERROR CODES section on page 11.

e. Overload protection

This protection is triggered if the charger output current is greater than the maximum output. The charger will automatically cut off the output and enter into an idle state, displaying error code "Er1".


f. Overcharge protection

If the overcharge protection mode engages, the charging current will decrease with the increase of the battery voltage until the battery is fully charged. The charger will automatically disconnect the output and display "FUL", preventing the risk of overcharge.



BATTERY CHARGER FUNCTIONS

LCD SCREEN WILL DISPLAY:

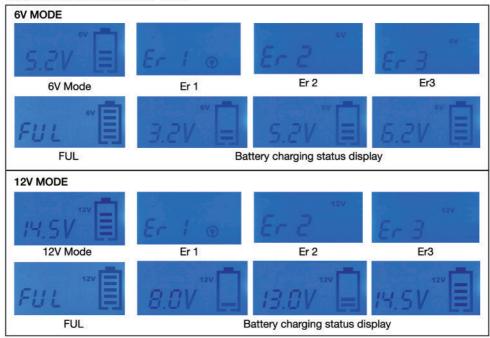

Manual Selection & Automatic Charge:

- Connect charger to battery & AC outlet
- Press button to select 6V or 12V mode (within 5 seconds)
- Charging will now automatically commence

Automatic Selection & Automatic Charge:

- Connect charger to battery & AC outlet
- Charger will automatically identify the battery voltage type & commence charging
- LFP Battery will be automatically selected, Manual selection is not required.

6V Mode (3A)

- Use this setting for charging 6V batteries

12V Mode (6A)

- Use this setting for charging 12V batteries





CHARGING INSTRUCTIONS

IMPORTANT:

Note the time the charger is connected to the battery and switched on.

Step 1 - Electrolyte Level Check

For sealed maintenance free batteries check the state of charge indicator.

Please Note: Refer to the vehicle manufacturers' owner's manual.

Step 2 - Connect battery charger to the battery

Please Note: Refer to the vehicle manufacturers' owner's manual.

There are three (3) options for connecting the battery charger to a battery

- i. Connect battery charger to a battery out of the vehicle
- ii. Connect battery charger to a battery fitted inside vehicles engine bay
- iii. Hard wire connection battery charger to a battery

i. Battery out of a vehicle

- Ensure the battery is in a safe location on a stable surface with adequate ventilation.
- Ensure the correct Personal Protective Equipment is being worn I.e. gloves and eye wear.
- Connect the RED lead (Battery Clip) to the Positive Terminal (+/positive) on the battery.
- Connect the BLACK lead (Battery Clip) to the Negative Terminal (-/negative) on the battery.
- The battery charger is then to be connected to the supply mains.
- Turn the 240V AC power source ON to turn the battery charger on.
- Charging will automatically commence. After charging, disconnect the battery charger from the supply mains.
- Disconnect the BLACK lead (Battery Clip) from the Negative Terminal (-/negative).
- Disconnect the RED lead (Battery Clip) from the Positive Terminal (+/positive).
- Refit battery into vehicle and correctly reconnect using the vehicle manufacturer's recommendations.





ii. Battery connected in vehicle

- Ensure the correct Personal Protective Equipment is being worn I.e. Gloves and Eye Wear.
- Ensure vehicle ignition is switched OFF before making ANY connection to battery.
- The battery terminal not connected to the chassis (positive) must be connected first.
- The second connection (negative) is to be made to the chassis, remote from the battery and fuel line.
- The battery charger is then to be connected to the supply mains.
- Turn the 240V AC Power Source ON to turn the battery charger on.
- Charging will automatically commence.
- After charging, disconnect the battery charger from the supply mains. Then remove chassis connection, and then the battery connection.





iii. Hard wire connection

- Ensure the battery is in a safe location on a stable surface with adequate ventilation.
- Ensure the correct Personal Protective Equipment is being worn i.e. gloves and eye wear.
- Secure the RED Battery Cable ring terminal to the Positive Terminal (+/positive) on the battery.
- Other connection is to be made to the chassis, remote from the battery and fuel line.
- Plug the battery charger into the one-way connector on the ring terminals.
- The battery charger is then to be connected to the supply mains.
- Turn the 240V AC Power Source ON to turn the battery charger on.
- Charging will automatically commence. After charging, disconnect the battery charger from the supply mains and disconnect battery connection.
- Disconnect the charger one way connector from the ring terminals, and ensure any loose leads in the engine bay are secure.

Step 3 - Charging

Either press the mode selection button on the battery charger (within 5 seconds of connection) to select mode, or the charger will automatically commence charging after 5 seconds.

Alternatively, once connected to AC and DC, the battery charger will commence charging after 5s.

Note:

If the battery charger does not detect a properly connected battery, an error code will display. In this instance, follow the appropriate instructions and reconnect the charger to the battery terminals.

If the battery clips or ring terminals are connected in reverse, an error code will display showing that the charger has been incorrectly connected to the battery. Follow the appropriate instructions and reconnect the charger to the battery terminals.



FREQUENTLY ASKED QUESTIONS

- Q. Is this battery charger waterproof, or water resistant?
- A. This battery charger is dust and water resistant to a rating of IP65. It is recommended to use the charger indoors or undercover and to avoid water and liquids.
- Q. Is this battery charger suitable for lithium batteries?
- A. This battery charger is suitable for 6V (2 cells) and 12V (4 cells) LiFePO4, lithium phosphate batteries only.
- Q. Is this battery charger suitable for 24V batteries?
- A. No. This battery charger is suitable for 6V and 12V batteries only.
- Q. Can this battery charger be left connected to a battery permanently?
- A. No. Do not leave this battery charger connected to the battery for more than 48 hours.

IMPORTANT:

Leaving a battery on charge permanently may cause damage to your battery, if a fault occurs. Lead Acid batteries require frequent checking of electrolyte levels. It is not recommended to leave AGM batteries on float charge permanently. Do not leave maintenance free batteries on float charge for extended periods as the electrolytes can dry out and cause an internal explosion.

Always refer to the vehicle or battery manufacturers' owners manual.



TROUBLESHOOTING ERROR CODE

Code	Condition	Possible Cause	Solution
Er1	Battery voltage <1V before charging	The battery is defective	Replace the battery
	Reverse connection	Accidental reverse connection of clips or ring terminals	Check connection and follow instructions to reconnect clips or ring terminals
	Automatic charge does not commence after 5 seconds	Charger clips or ring terminals not properly connected to battery	Check connections and follow instructions to reconnect if necessary
		Incorrect voltage Mode selected	Select correct Mode on charger, or disconnect & reconnect charger and wait 5 seconds for automatic charge to engage
	Battery voltage is >7.8V (6V battery) or >15.6V (12V battery) before charging.	Incorrect voltage Mode selected	Select correct Mode on charger, or disconnect & reconnect charger and wait 5 seconds for automatic charge to engage
Er2	Battery voltage is <4.5V (6V battery) or <9V (12V battery) after 30 minutes of charging Battery is not fully charged after 48 hours on charge	A load may be connected to the battery	Disconnect the load and attempt to charge again
		Battery capacity is too big	Leave battery on charge, checking the battery and charging progress regularly
		The battery is defective	Replace the battery
	Battery voltage is <6V (6V battery) or <12V (12V battery) in 1 minute after a full charge	The battery is sulphated beyond reconditioning	Replace the battery
Er3	The temperature of the charger is too high	High ambient temperature	Ensure adequate ventilation. The charger will resume charging after cooling down to 60°C



WARRANTY

Our product is guaranteed to be free from quality and manufacturing defects for a period of 5 years.

If your product becomes defective during this period, SRGS PTY LTD will offer you either a replacement, credit or refund where a product is faulty; wrongly described; different from the sample shown to you or do not do what they are supposed to do.

This warranty will not cover substantially modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim the warranty, take the product to the front Service Desk of your nearest store of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim. Should you not be able to provide proof of purchase with a receipt or bank statement, identification showing name, address and signature may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you. For online store purchases, SRGS PTY LTD will pay for the return freight for any product assessed as having a major failure.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by SRGS PTY LTD, 6 Coulthards Avenue, Strathpine QLD 4500, Australia. Phone: 1300 175 010.





6V-3A / 12V-6A 7 STAGE BATTERY CHARGER INSTRUCTION MANUAL

