





FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA185MS

KIA RIO JB

Filter located behind glove box.

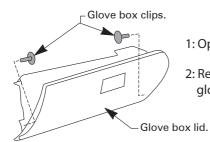

- 1: Open glove box.
- 2: Remove glove box lid by removing glove box clips as shown.

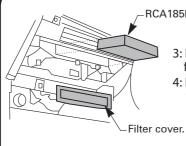

RCA185P/F.

- 3: Pull filter cover to remove, remove used filter from housing, note flow direction.
- 4: Insert new Ryco RCA185P/F filter, note flow direction. re-assemble in reverse sequence.
- 4: Dispose of used filter correctly.

GUD Automotive Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au

GUD Automotive -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz