





## FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA113MS

## **NISSAN PULSAR**

Filter located behind glove box.

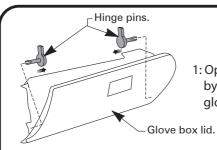

1: Open glove box, remove hinge pins by levering out as shown, remove glove box.

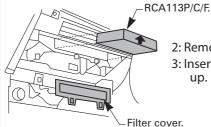

2: Remove filter cover, remove used filter.

3: Insert new Ryco filter with flow arrow up.

4: Dispose of used filter correctly.


GUD Automotive Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au GUD Automotive -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.rvco.co.nz






#### FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA113MS

# NISSAN X-TRAIL Filter located behind glove box.

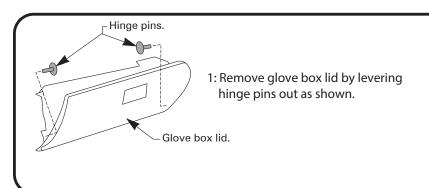

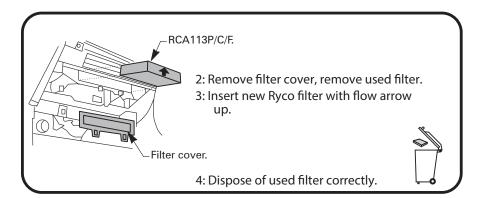

GUD Automotive Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au GUD Automotive -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz






# FITTING INSTRUCTIONS FOR RYCO CABIN FILTER RCA113MS NISSAN MAXIMA & MURANO Filter located behind glove box



Undo 2 screws at bottom of glove box as shown.

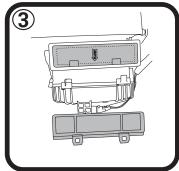

Unclip filter cover and remove, pull used filter out of housing and replace with new Ryco filter.



Open glove box, Undo 4 screws at top of glove box as shown, screws 3 & 4 retain staple (5) for glove box lock, lower glove box to access filter housing, Disconnect glove box light from back of glove box.



Refit all previously removed components in reverse sequence.

Dispose of used filter correctly.

GUD Automotive Pty Ltd 29 Taras Ave Altona North Victoria 3025 Australia. www.rycofilters.com.au GUD Automotive -A division of GUD (NZ) Holdings Limited 626A Rosebank Road Avondale Auckland, New Zealand www.ryco.co.nz