

Vehicle Mounting Instructions

1



Attach base section to tow ball using your tow ball ensuring it is secured firmly at all times before travel.

*Please ensure tow ball is tightened correctly.

2



Insert bike carrier into base section and secure with locking pin provided.

*Locking pin must be secured before each use

3




Locate top section of bike carrier over main pole and secure with bolt, washer and nut provided.

*Please ensure bolt is tight before each use

*Spanners to suit bolt supplied in box.

WARNING: This carrier is **NOT** to be attached to caravans, trailers, motor homes and the like.

Clamping Instructions

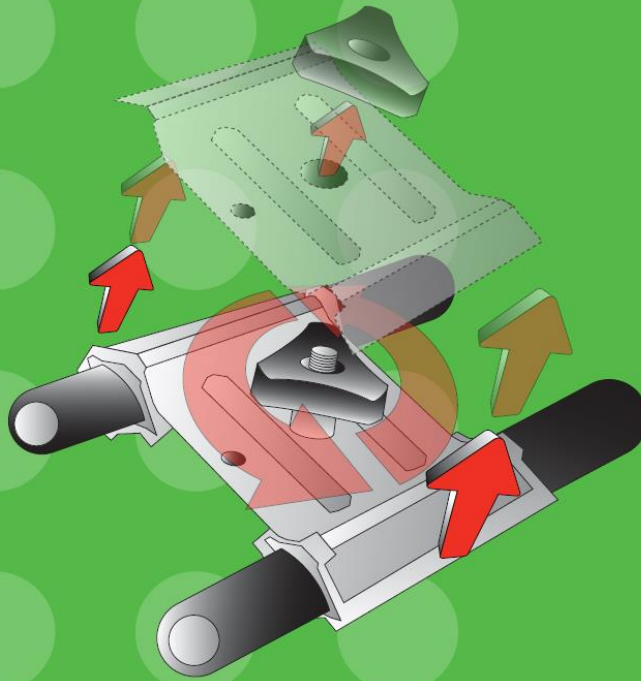

- 1** Remove the securing nut by turning anticlockwise.
- 2** Lift the top plate off and locate the bike's horizontal mounting bar in the cradle. If the mounting bar of the bike is not horizontal or of a large design, an adaptor will be required to locate bikes correctly.
- 3** Replace the top plate and tighten with securing nuts.
*Do not over tighten on non metal frames
- 4** Always ensure you use the cam buckle tie down provided to prevent any bike movement while travelling.