

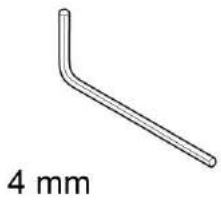


EN Fitting Instructions for Basic Carrier

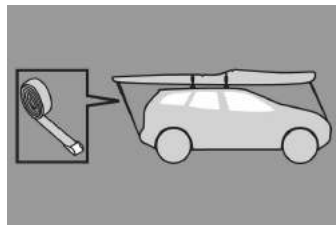

x 1

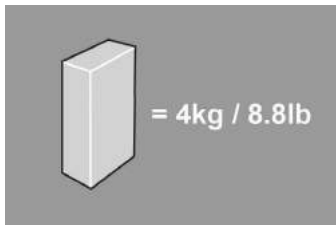

x 2



x 2



x 16




x 1




x 4




x 4

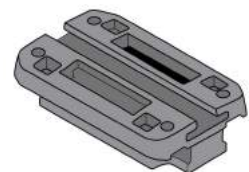

x 4

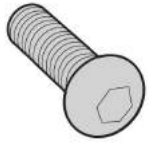


x 4

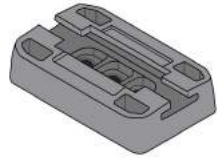

x 4



x 2

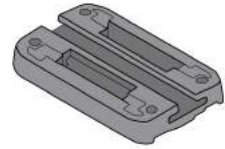

x 4



x 2

First Time Installation




- Remove parts from inside the package and check. Contact your dealer if any parts are missing or damaged.



- This accessory fits Whipbar and Prorack crossbar types A, B, C and D.

Choose your fitment type:

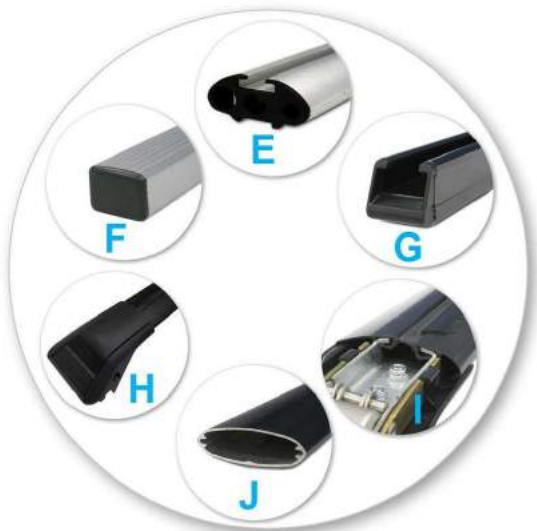

- Determine your crossbar type for the correct fitment:
- E = T-slot crossbars
- F = Rectangular crossbars
- G = Trades or heavy duty crossbars
- H = Ford Territory
- I = Fast Rack (FRS) crossbars
- J = Other oval crossbars


Attention:




- NOTE: Kayak cradle knob has to be fully backed off (anti-clockwise) for the adaptor to slide onto the cradle or the cradle to slide in to a T-slot.
- The top of the wedges should be level with surround, as shown.
- Do not continue to wind knob once resistance is met.
NOTE: Knobs turn clockwise to tighten and anti-clockwise to loosen.



- Note: There is a left hand and right hand side.
- Knobs should face rear of vehicle when on crossbars.

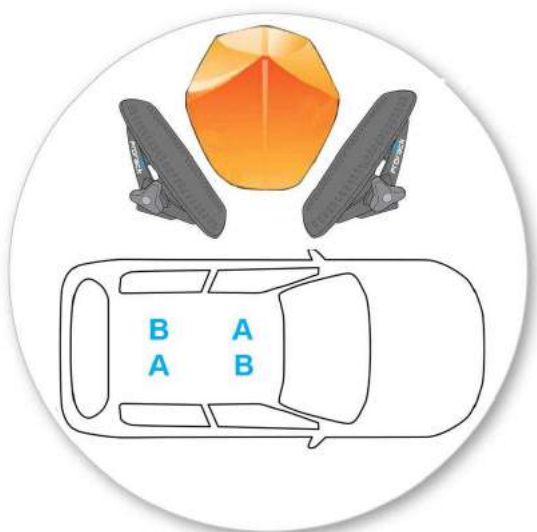

- Cradle positions for narrow hulled kayak.
NOTE: Kayak can be off centre on vehicle if required.

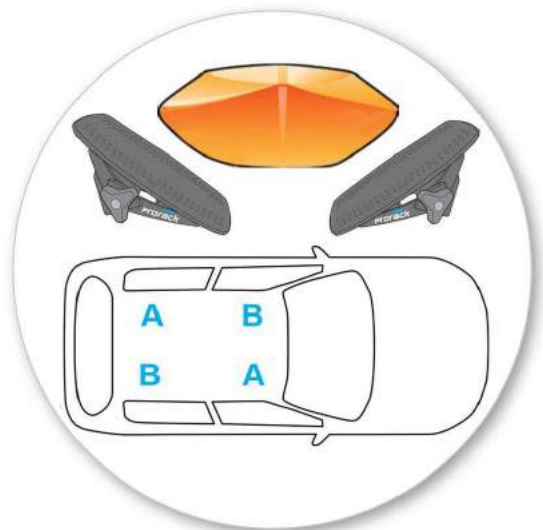

- Cradle positions for wide hulled kayak.

Installation on T-slot crossbars




- For installation on crossbars types similar to shown e.g. A, B and E.

Whispbar and Prorack crossbars



- For type A, remove cover with keys.

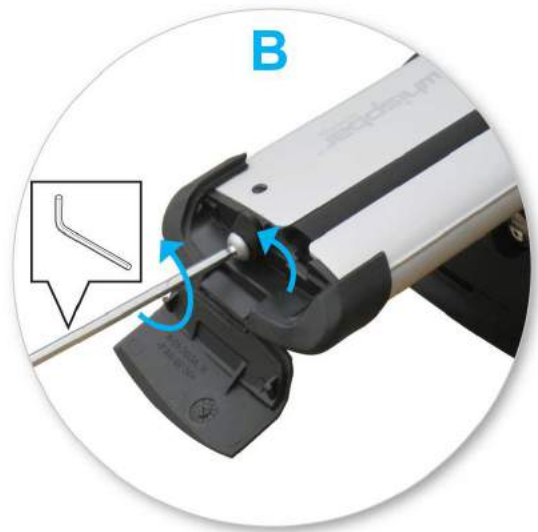

- For type B, unfasten security screw with an Hex Key and lift the accessory tab up.



- Push down rubber infill (Whispbar and Prorack crossbars)
NOTE: For other manufacturers you may have to cut rubber infill to fit this accessory. Refer to your manufacturer's crossbar instructions.



- Slide kayak cradle into T-slot on crossbar.
- Position where you want the accessory to be.

Installation on rectangular crossbars



- For installation on crossbars types similar to shown e.g. C and F.



- For this crossbar type, ensure you have correct adaptor as shown.
- This adaptor fits rectangular crossbars 32mm x 22mm (1 1/4" x 7/8").



- Open rectangular bar adaptor flap.



- Position rectangular bar adaptor, so the open flap is on opposite side to the knob on the kayak cradle.
- Slide adaptor onto base of kayak cradle.



- Fasten adaptor to kayak cradle with provided torx screws and torx key.
- Repeat for all items.



- Slide rectangular bar adaptor from rear of crossbar until flush with front .
- Position where you want the accessory to be.



- Close flap to secure.

Installation on Trades crossbars



- For installation on crossbars types similar to shown e.g. D and G.



- For this crossbar type, ensure you have correct adaptor as shown.

For Whispbar type D crossbars only.




- Use the Hex Key to remove the endcap screw.



- Remove the endcap by pulling on the endcap pin and pushing on the top of the endcap. Use a side to side motion to assist.



- Slide adaptor onto base of kayak cradle.

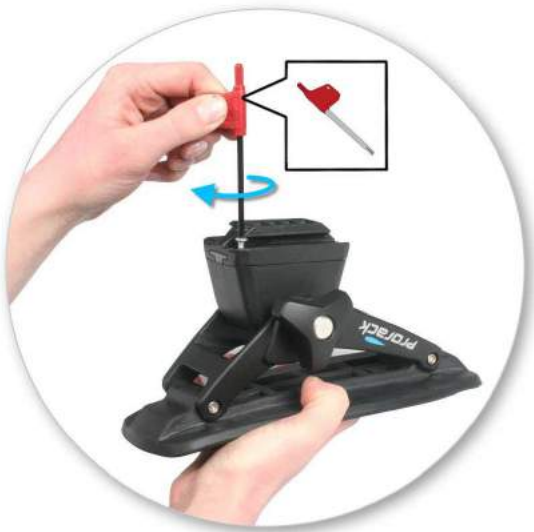

- Fasten adaptor to kayak cradle with provided torx screws and torx key.



- Slide kayak cradle into crossbar.
NOTE: With some crossbars, the roof rack endcaps or leg may have to be removed to do this. Refer to your manufacturer's crossbar instructions.

Installation on Ford Territory crossbars



- NOTE: Fitting this kayak holder to Ford Territory crossbars requires sliding nuts SX46002BA, available from Ford Dealerships.



- For this crossbar type, ensure you have correct adaptor as shown.




- Remove the owl wing strip from crossbars.



- Extend crossbar by pressing release button underneath leg and sliding cover outwards.



- Use the instructions that come with the Ford SX4600BA sliding nut kit to insert two nuts into each bar.
- Position where you want the accessory to be.

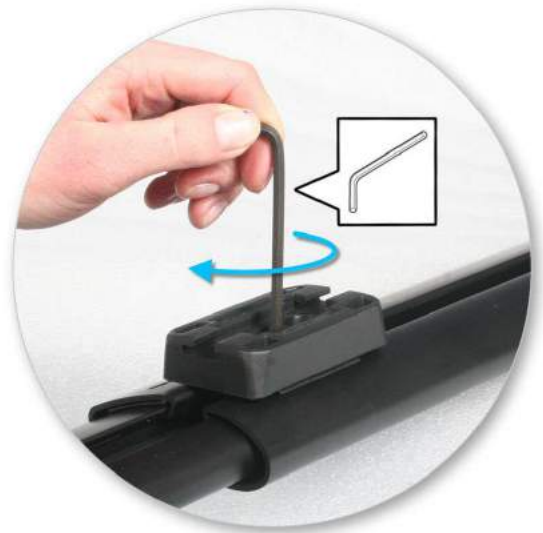

- Attach adaptor to sliding nut, using the capscrews as shown. Position to suit kayak hull width before tightening fully.
- Repeat for all four positions.



- Slide kayak cradle into adaptor on crossbar.
- Tighten the three lobe knob on the kayak cradle.
NOTE: Do not continue to wind knob once resistance is met.

Installation on Fast Rack crossbars




- For installation on crossbars similar to shown.



- For this crossbar type, ensure you have correct adaptor as shown.



- Slide adaptor onto base of kayak cradle.

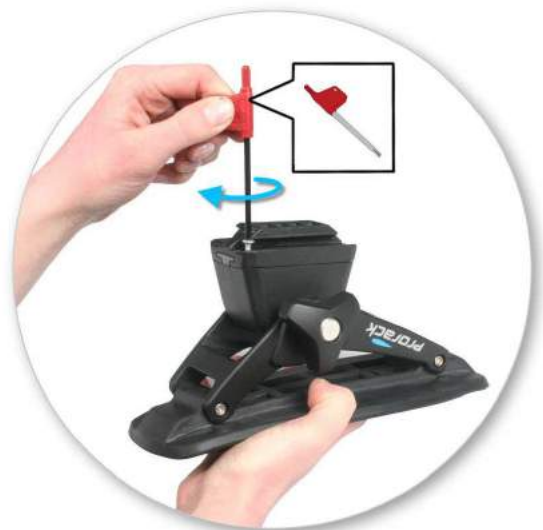

- Fasten adaptor to kayak cradle with provided torx screws and torx key.



- Slide kayak cradle into crossbar.
- Position where you want the accessory to be.

Installation on other crossbar types



- Adjust cradle position if required.

- Use strap adaptor.



- Slide adaptor onto base of kayak cradle.
- Position strap adaptor, so the knob on the adaptor is on opposite side to the knob on the kayak cradle.



- Tighten the three lobe knob on the kayak cradle.
NOTE: Do not continue to wind knob once resistance is met.





- Unclip strap. Loosen adaptor knob if required.



- Adjust knob so catches for strap are flush with outside of clamp block, as shown.




- Position where you want the accessory to be.
- Feed strap under crossbar and push in to clamp block as far as possible.



- Tighten adaptor knob while pushing the strap firmly into the clamp block.

Fitment

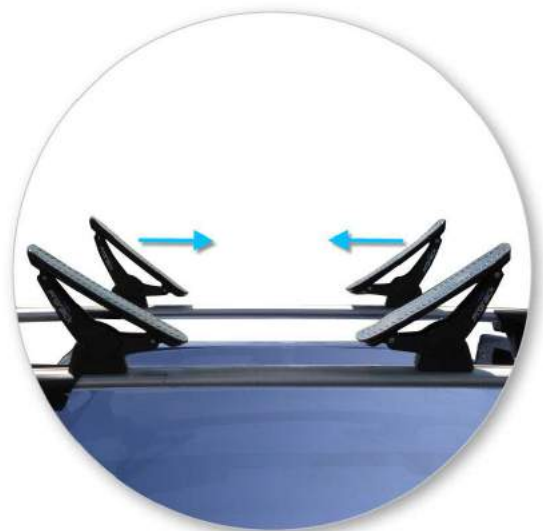

- Slide cradles along crossbar to approximate position for holding kayak.



- On closest side of vehicle, turn cradles to face outwards.



- Place edge of kayak onto turned cradles. Take care when lifting.



- Roll kayak forward. Outside cradles will turn with kayak, to position onto both cradles.



- Cradles should fit hull closely to prevent movement during transport. Make sure there is a gap between kayak hull and the crossbar.
- Adjust cradle position if required.
- Crossbars A, B, D, E, G and I only
- Tighten the black plastic knob.
- Do not over tighten.



- Thread end of camlock strap through buckle protector.



- Secure kayak firmly to crossbars with camlock straps.



- Slide buckle protector over buckle to protect hull of kayak.



- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.



- NOTE: Tie downs necessary to secure kayaks front and rear, are sold separately.

- Yakima Australia Pty Ltd
17 Hinkler Court
Brendale QLD 4500
AUSTRALIA

www.whispbar.com
www.whispbar.com.au
www.whispbar.co.nz
www.whispbar.co.uk
www.whispbar.co.za
www.whispbar.eu
www.whispbar.ca

Maintenance

- Clean the car roof and surfaces of the product that will be in contact with the car roof.
- Follow the fitting instructions for fitting the product to your vehicle. Make sure all steps are carried out in order.
- Set crossbars a minimum distance of 700mm (27 1/2") apart where no other distance is specified in the fitting instructions. This is especially important when carrying long loads.
- Check unit is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Some glass/panoramic roofs and radio antennae may not be able to be used when the product is fitted.
- Do not modify this product.
- Refer to the maximum permitted load capacity specified in the fitting instructions. Do not exceed the vehicle manufacturers roof load rating if it is lower than the maximum load capacity specified in the fitting instructions.
- Loads should not overhang the sides of the product and be evenly distributed with the lowest possible centre of gravity.
- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- Objects with pointed ends (e.g. ski poles) should be carried with the pointed ends to the rear of the vehicle.
- Remove all loose or removable objects from the load prior to loading.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.
- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Note that the total height of the vehicle increases when upright loads are carried.
- Products should be locked during transport if they have locks fitted.

- Check and replace worn out or defective parts.
 - Keep the product clean and maintained.
 - Never drive into a car wash with the roof rack system fitted.
 - Lubricate locks and adjusting screws at regular intervals.
 - Remove the products from the vehicle when not in use. Make sure all loose parts are stored safely.
-

WARRANTY & DISCLAIMER

Yakima Australia Pty Ltd ABN 58 154 440 221
17 Hinkler Court, Brendale QLD 4500
Tel: 0800 4776 722 (NZ) or 1800 143 548 (AU)
Email: warranty@yakima.co.nz or warranty@yakima.com.au

1. Where the product is supplied to the customer for other than business purposes within the meaning of section 43 of the New Zealand Consumer Guarantees Act 1993, the provisions of that Act shall apply. It is important that anyone who fits or uses this product does so in accordance with the manufacturer's instructions.
2. Where the product is supplied to the customer for business purposes within the meaning of section 43 of the New Zealand Consumer Guarantees Act 1993, the provisions of that Act and all other representations or terms (including any conditions or warranty expressed or implied by law, statute or otherwise) not expressly included in this leaflet are hereby expressly excluded shall have no effect and the clauses (a) and (b) shall apply.
3. Subject to the **Additional Information (Australia)**, where the product is supplied and purchased in Australia, the following shall apply:
 - a. THE SUPPLIER WARRANTS the product to be free from defects in materials and/or workmanship for a period of three (3) years from the date of original purchase (the warranty period). Proof of purchase is required. Subject to the limitations and exclusions set out below, the Supplier hereby agrees to remedy any defects in materials or workmanship becoming apparent during the warranty period, by replacing or repairing any defective product or component (at its option) free of charge to the purchaser in respect of replacement parts or labour. Any defective product or component must be notified and where practicable, returned at the purchaser's expense to the Supplier immediately upon discovery of the alleged defect and no attempt made on the part of the purchaser to repair it.
 - b. EXCEPTIONS, EXCLUSIONS AND LIMITATIONS TO WARRANTY. The product and/or its components must be fitted/ assembled and loaded in accordance with the Supplier's written instructions and any requirements set out in the car's owner manual. This warranty does not cover defects, loss or damage resulting from circumstances beyond the Supplier's control including, but not limited to misuse, overloading, or failure to assemble and/or fit the product or component in accordance with the Supplier's written instructions. Nor does the warranty cover defects, loss or damage resulting from accidents, unlawful use of the vehicle or defects/inconsistencies in the vehicle on which the product or component is fitted. Liability for direct, indirect, special, punitive, incidental, exemplary, contractual or consequential damage or loss arising from defects, faulty materials or design omissions or negligence or workmanship in the product or its components is hereby expressly excluded subject to the following. Certain Commonwealth legislation, including the Competition and Consumer Act 2010 (Cth), and other State and Territorial legislation confers upon purchasers rights which cannot be excluded from or be restricted or modified by contract. Any conditions, guarantees and/or warranties implied by law and incapable of exclusion are deemed to be expressly incorporated herein. Nothing herein contained is intended nor shall be permitted to be inconsistent with any such conditions, guarantees and/or warranties. To the extent permitted by legislation all conditions, guarantees and/or warranties such as implied warranties which are capable of exclusion are hereby expressly excluded and negated.

ADDITIONAL INFORMATION (AUSTRALIA)

This information should be read in conjunction with clauses (a) and (b).

IMPORTANT LEGAL NOTICE

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty does not change or take away your rights under the Australian Consumer Law. Your right to claim under this policy for the benefits covered is in addition to other rights and remedies you have under the law in relation to the product.

Where you become aware of defects in materials or of workmanship, and wish to make a claim under this warranty you must do the following for the warranty to be honoured by your Prorack dealer or Yakima Australia Pty Ltd ABN 58 154 440 221 (Yakima):

1. Make a claim as soon as practicable by contacting the Prorack dealer from whom you purchased the product, who will give you instructions on how to proceed.
2. If you are unable to contact the Prorack dealer, or the dealer is not able to remedy the defect, you should contact Yakima as soon as practicable at:

Call: 0800 4776 722 (NZ) or 1800 143 548 (AU)
 Email: warranty@yakima.co.nz or warranty@yakima.com.au

Alternately, you can write to Yakima at 17 Hinkler Court, Brendale QLD Australia 4500 in order to make a claim under your warranty.

3. Upon contacting Yakima directly, you should explain as fully as possible the defect. A Yakima representative will provide you with appropriate instructions for returning the product together with a copy of the original purchase invoice or receipt to Yakima.
4. The costs and expenses associated with making a claim under your warranty including the costs of complying with those instructions and of returning the product to Yakima or the Prorack dealer will be borne by you.

Following receipt of the product and purchase invoice or receipt, Yakima or the Prorack dealer must inspect the product to determine whether the claim falls within the warranty. If:

- 4.1 the claim falls within the warranty, Yakima will remedy any defects in materials or workmanship becoming apparent during the warranty period, by replacing or repairing any defective product or component (at its option) free of charge to the purchaser in respect of replacement parts or labour.
- 4.2 the claim does not fall within the warranty, Yakima will return the product to you at your expense.